
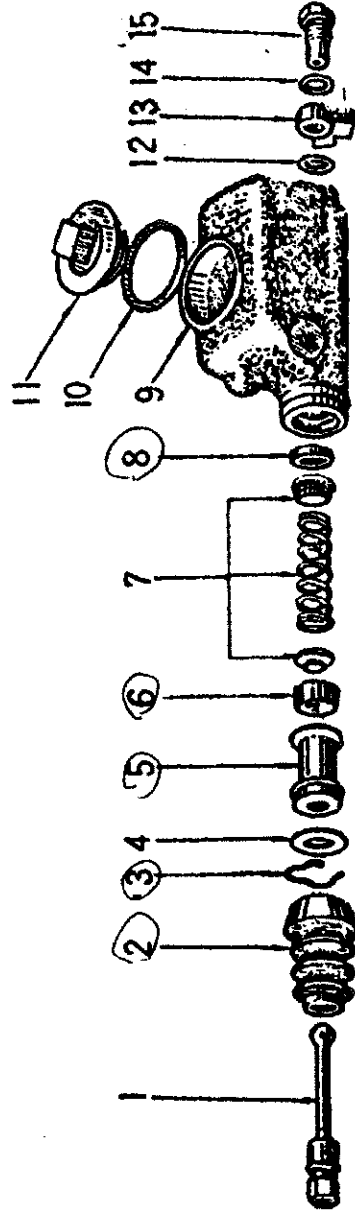


Key	Parts No.	Nomenclature	No. Req'd
<u>WHEEL BRAKE</u> (Continued)			
5	J-A-877	Bolt, hex. hd. (Front brake to steering knuckle)	12
6	J-GM-120382	Lockwasher	32
7	J-909393	Nut, hex. (Rear brake to axle housing)	12
8	JM02119	Bolt, hex. hd. (Rear brake to axle housing)	12
9	J-805592	Eccentric, wheel brake shoe	8
10	J-GM-120369	Nut, hex.	8
11	J-116551	Lining, brake shoe forward	4
12	JM03749	Lining, brake shoe reverse	4
13	J-374586	Rivet	80
14	J-391404	Cup, shoe hold down spring	16
15	J-636863	Spring, hold down, brake shoe	8
16	J-807374	Pin, hold down spring	8
17	J-805602	Spring, return, brake shoe, anchor end	4
18	J-807366	Plate, backing brake ass'y	4
	JM03742	Kit, brake shoe and lining	1
		Consists of:	
	J-807369	2 Shoe and lining, forward	
	J-807370	2 Shoe and lining, reverse	
	JM03743	Lining set, brake shoe	1
		Consists of:	
	J-116551	2 Lining, forward	
	JM03749	2 Lining, reverse	
	J-374586	42 Rivet	
	JM03746	Kit, brake shoe and lining OS. .030"	2
		Consists of:	
	JM03747	2 Shoe and lining, forward OS. .030"	
	JM03748	2 Shoe and lining, reverse OS. .030"	
	JM03750	Lining set, brake shoe OS. .030"	2
		Consists of:	
	JM03751	2 Lining, forward OS. .030"	
	JM03752	2 Lining, reverse OS. .030"	
	J-374586	42 Rivet	

Key	Parts No.	Nomenclature	No. Req'd
<u>WHEEL BRAKE CYLINDER</u>			
	J-807356	Cylinder, front wheel brake, ass'y	2
	J-807357	Cylinder, rear wheel brake, ass'y	2
1	J-802550	Boot, front wheel brake cylinder	4
	J-802551	Boot, rear wheel brake cylinder	4
2	J-642013	Piston, front brake cylinder ass'y	4
	J-807411	Piston, rear brake cylinder ass'y	4
3	J-637579	Cup, front wheel brake cylinder	4
	J-A-6116	Cup, rear wheel brake cylinder	4
4	J-639949	Spring, front brake cylinder cup	2
	J-637545	Spring, rear brake cylinder cup	2
5	J-A-1737	Cylinder, front wheel brake	2
	J-A-6112	Cylinder, rear wheel brake	2
6	J-648674	Screw, bleeder	4
	JMO3781	Kit, front wheel brake cylinder	1
		Consists of:	
	J-802550	2 Boot, front cylinder	
	J-637579	2 Cup, front cylinder	
	JMO3782	Kit, rear wheel brake cylinder	1
		Consists of:	
	J-802551	2 Boot, rear cylinder	
	J-A-6116	2 Cup, rear cylinder	

WHEEL BRAKE CYLINDER



MASTER CYLINDER BRAKE

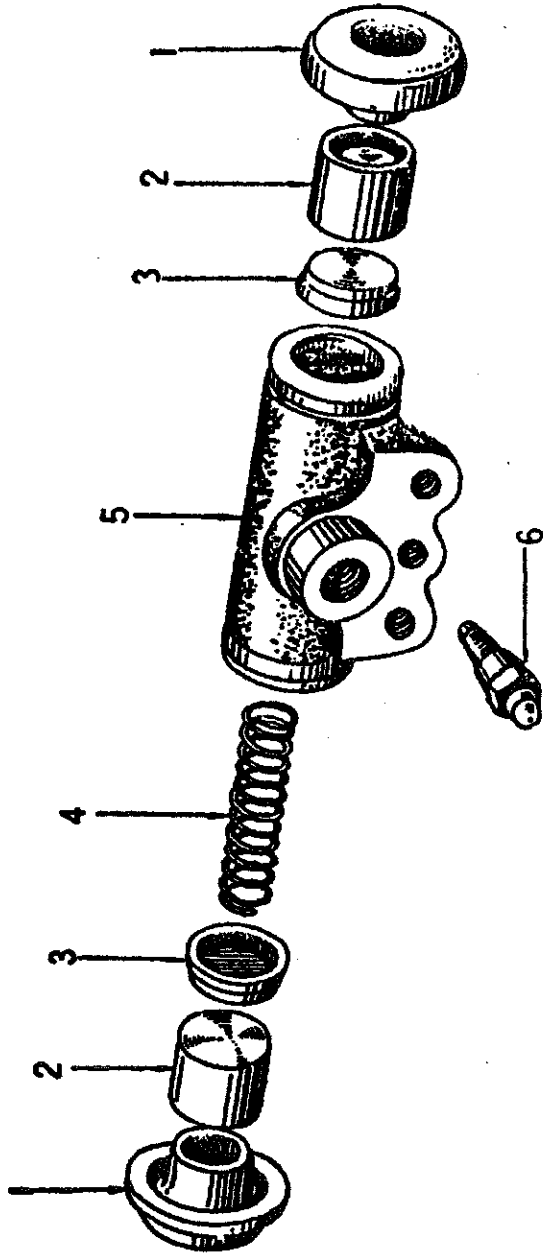

Key	Parts No.	Nomenclature	No. Req'd
<b><u>MASTER CYLINDER BRAKE</u></b>			
	J-805223	Cylinder, master, ass'y	1
1	JM03148	Rod, push, master cylinder	1
2	J-647283	Boot, master cylinder	1
3	J-637596	Wire, lock, piston stop	1
4	J-637597	Plate, stop, master cylinder piston	1
5	J-637286	Piston, master cylinder	1
6	J-637590	Cup, primary	1
7	JM01953	Spring and valve ass'y	1
8	J-637583	Seat, valve, ass'y	1
9	J-643671	Tank, supply	1
10	J-637612	Gasket, filler cap	1
11	J-118493	Cap, filler	1
12	J-637604	Gasket, outlet fitting to master cylinder	1
13	J-A-557	Fitting, outlet	1
14	J-637606	Gasket, outlet bolt to outlet fitting	1
15	J-637605	Bolt, outlet fitting	1
	J-811645	Valve, check ass'y	1
	J-805654	Kit, repair master cylinder	1
		Consists of:	
	J-647283	1 Boot	
	J-637590	1 Cup	
	J-647286	1 Piston ass'y	
	J-637583	1 Seat, valve	
	J-811645	1 Valve, check ass'y	
	J-637598	1 Wire, lock	

HYDRAULIC BRAKE SYSTEM


RH 12  
MA 305300

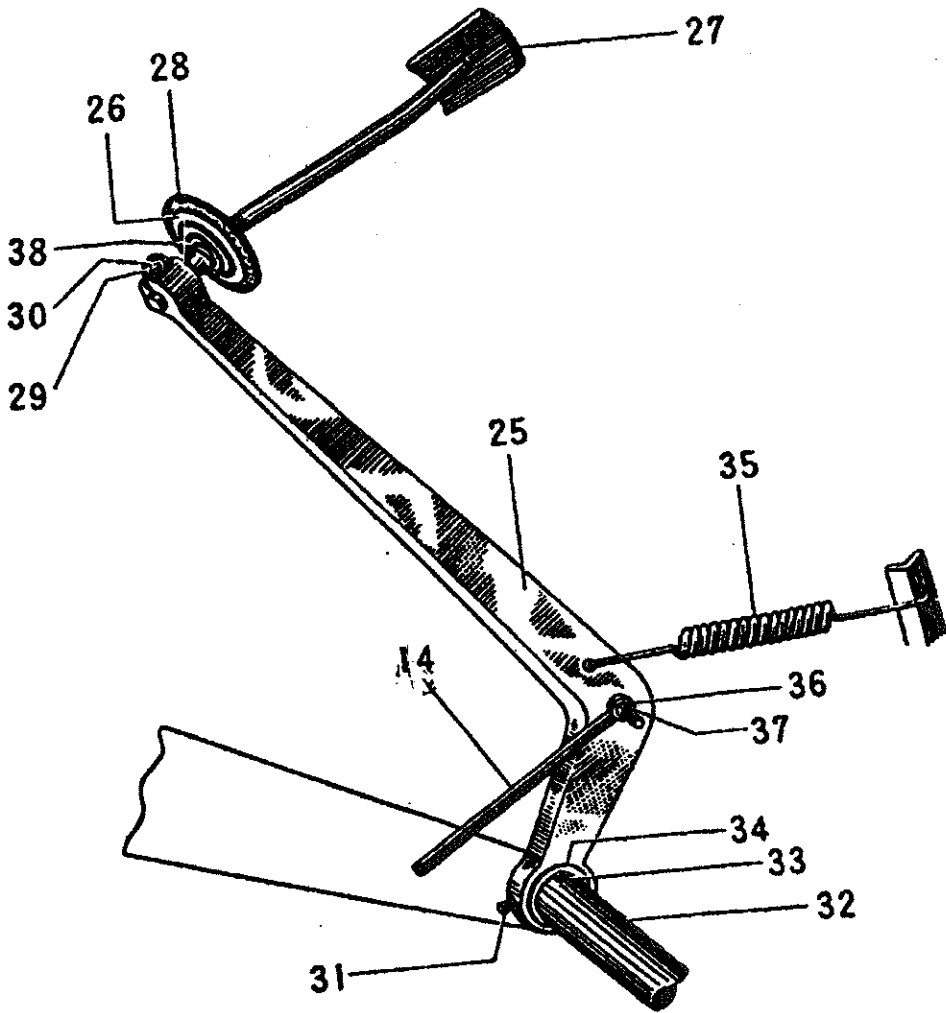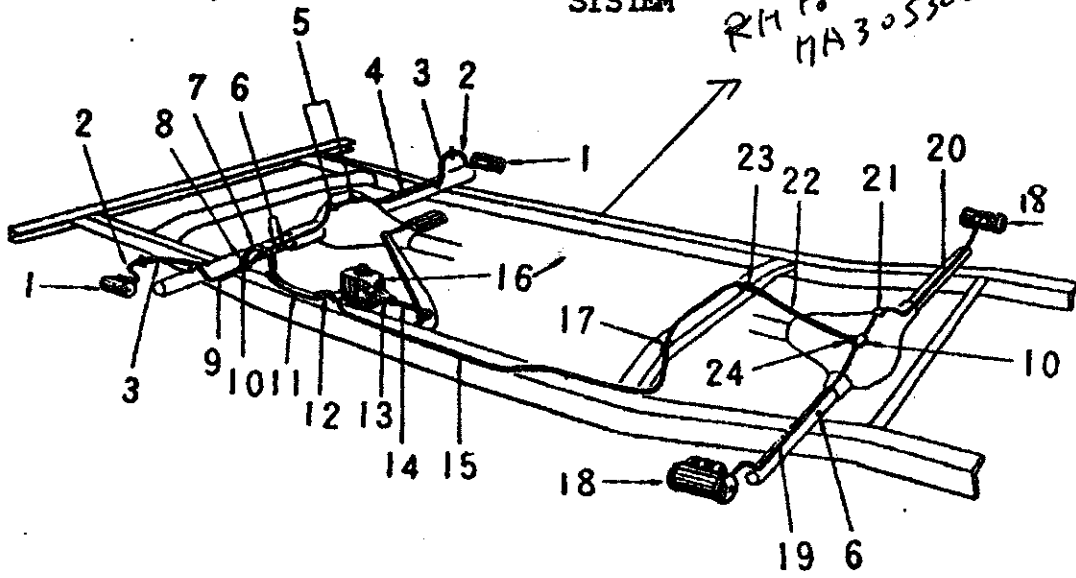

Key	Parts No.	Nomenclature	No. Req'd
<u>HYDRAULIC BRAKE SYSTEM</u>			
1	J-807356	Cylinder, front wheel brake ass'y	2
2	J-A-1488	Pipe, brake (Front wheel cylinder to axle hose)	2
3	J-A-15802	Hose, front axle pipe to front brake pipe	2
4	J-801394	Pipe, brake, ass'y (Tee to front brake hose R.H.)	1
5	J-A-1378	Clip, under front axle cover bolt	2
6	J-804201	Clip, brake pipe to axle housing	3
7	J-A-15801	Hose, master cylinder pipe to front brake pipe	1
8	J-A-8848	Spacer, front axle tee to axle bracket	1
9	J-801393	Pipe, brake ass'y (Tee to front brake hose L.H.)	1
10	J-637432	Tee, axle brake pipe	2
11	J-647915	Pipe, brake, ass'y (Master cylinder to front hose)	1
12	J-806162	Shield, master cylinder, ass'y	1
13	J-647283	Boot, master cylinder	1
14	J-647606	Bolt, eye, master cylinder to pedal	1
15	J-647544	Pipe, brake, ass'y (Master cylinder to rear hose)	1
16	J-805223	Cylinder, master, ass'y	1
17	J-645539	Clip, brake pipes to frame	4
18	J-807357	Cylinder, rear wheel brake, ass'y	2
19	J-640942	Pipe, brake, ass'y (Tee to left rear brake)	1
20	J-640943	Pipe, brake, ass'y (Tee to right rear brake)	1
21	J-QM-125912	Clip, under rear axle cover bolt	1
22	J-A-15803	Hose, rear brake ass'y (A307173)	1
23	J-637427	Clip, spring lock "U" type	6
24	J-637426	Gasket, brake hose to brake and axle tee	2
25	J-800527	Pedal, brake ass'y	1
26	J-A-6360	Washer, pedal shank draft pad	1
27	J-905860	Pad, brake pedal, ass'y	1
28	J-807208	Pad, draft pedal shank	1

Key	Parts No.	Nomenclature	No. Req'd
<u>HYDRAULIC BRAKE SYSTEM (Continued)</u>			
29	J-GM-122027	Screw, hex. hd.	1
30	J-GM-120214	Lockwasher	1
31	JM03092	Fitting, lubricating brake pedal	1
32	J-A-495	Shaft, brake pedal, ass'y	1
33	J-GM-137228	Pin, cotter, brake pedal to shaft	2
34	J-A-498	Washer, pedal shaft	1
35	J-630593	Spring, retracting brake pedal	1
36	J-GM-120395	Washer, plain	1
37	J-GM-121222	Pin, cotter	1
	J-GM-120370	Nut, hex.	1
	JM03093	Fitting, lubricating, pedal shaft	1
38	J-650684	Spring	1
<u>FRONT WHEEL AND ATTACHING PARTS</u>			
1	J-641920	Cap, wheel hub	2
2	J-A-760	Bolt, hex. hd.	12
3	J-A-868	Flange, drive, axle shaft	2
4	J-649784	Gasket, drive flange	2
5	J-A-866	Nut, retaining, wheel bearing	4
6	J-A-867	Lockwasher, wheel bearing nut	2
7	J-A-865	Lockwasher, wheel bearing nut	2
8	J-52942	Cone and roller, front wheel bearing	4
9	J-52943	Cup, front wheel bearing	4
	JM01255	Disk, wheel 4.50E-16	2
10	J-649874	Hub and drum, front wheel R.H.	1
		Consists of:	
	J-649938	1 Hub, front, ass'y R.H.	
	J-GM-137991	3 Screw, fl. hd.	
	J-808769	1 Drum, front and rear wheel brake	
	J-649873	Hub and drum, front wheel L.H.	1
		Consists of:	
	J-649937	1 Hub, front, ass'y L.H.	
	J-GM-137991	3 Screw, fl. hd.	
	J-808769	1 Drum, front and rear wheel brake	
11	J-805150	Oil seal, front hub	2

FRONT WHEEL AND  
ATTACHING PARTS

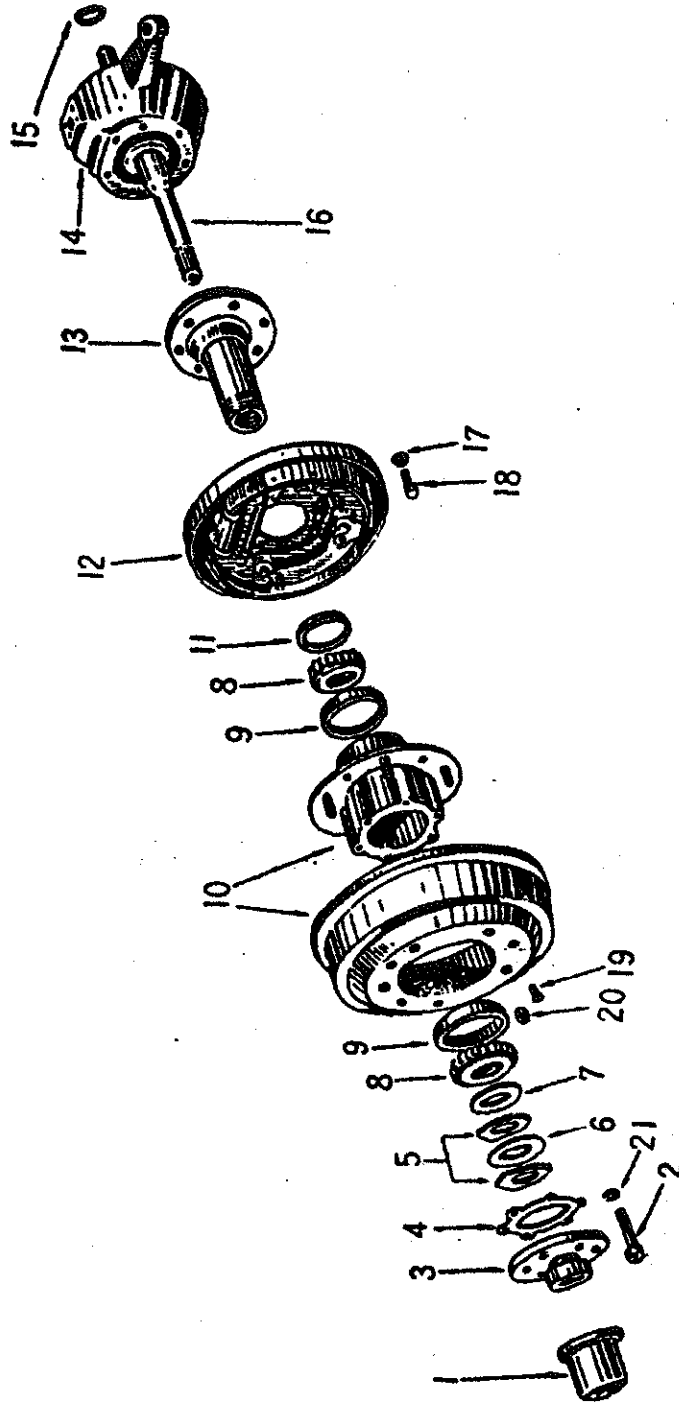



Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------


FRONT WHEEL AND ATTACHING PARTS (Continued)

12	J-807281	Brake, front, ass'y L.H.	1
	J-807282	Brake, front, ass'y R.H.	1
13	J-649782	Spindle and bushing, wheel bearing ass'y	2
14	J-805784	Knuckle and arm, steering L.H.	1
	J-805783	Knuckle and arm, steering R.H.	1
15	J-649769	Washer, thrust, axle shaft	2
16	J-800612	Kit, shaft and universal joint R.H.	1
		Consists of:	
	J-649772	1 Shaft and universal joint R.H.	
	J-649783	1 Bushing, wheel bearing spindle	
	J-649784	1 Gasket, drive flange	
17	J-GM-120382	Lockwasher (Front brake to steering knucle)	12
18	J-A-877	Bolt, hex. hd. (Front brake to steering knucle)	12
19	J-GM-137991	Screw, ctsk. hd.	6
20	J-636035	Nut, hex. L.H.T. wheel hub bolt	5
	J-635516	Nut, hex. R.H.T. wheel hub bolt	5
21	J-GM-103321	Lockwasher	12

REAR WHEEL AND ATTACHING PARTS

1	JM02473	Oil seal, axle shaft carrier end	2
2	J-52799	Cone and roller, rear axle shaft bearing	2
3	J-52800	Cup, rear axle shaft bearing	2
4	JM02644	Shim set, rear axle shaft bearing	1
		Consists of:	
	JM02356	2 Shim, 0.13 mm thick	
	JM02357	3 Shim, 0.25 mm thick	
	JM02358	2 Shim, 0.75 mm thick	
5	J-802887	Retainer, axle shaft bearing	2
6	J-807284	Brake, rear ass'y R.H.	1
	J-807283	Brake, rear ass'y L.H.	1
7	J-640886	Gasket, rear brake grease protector	4

REAR WHEEL AND  
ATTACHING PARTS

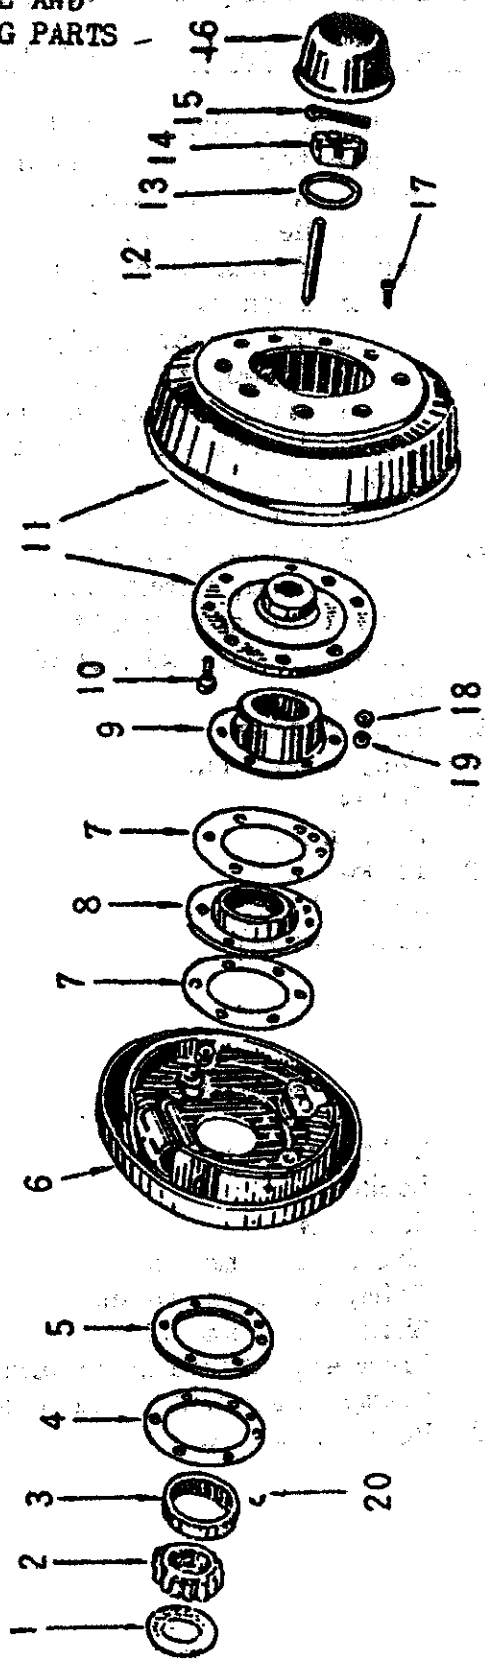


Key	Parts No.	Nomenclature	No. Req'd
<u>REAR WHEEL AND ATTACHING PARTS (Continued)</u>			
8	J-646239	Retainer, grease, axle shaft ass'y	2
9	J-640888	Protector, grease, rear brake	2
10	J-649878	Bolt, hex. hd. R.H.	5
	J-649877	Bolt, hex. hd. L.H.	5
11	J-801708	Hub and drum ass'y, rear wheel R.H.	1
		Consists of:	
	J-801709	1 Hub, rear ass'y	
	J-GM-137991	3 Screw, fl. hd.	
	J-808769	1 Drum, front and rear wheel brake	
	J-801707	Hub and drum ass'y, rear wheel L.H.	1
		Consists of:	
	J-801709	1 Hub, rear ass'y	
	J-GM-137991	3 Screw, fl. hd.	
	J-808769	1 Drum, front and rear wheel brake	
12	J-636374	Key, rear axle shaft	2
13	J-640945	Washer, rear axle shaft	2
14	J-636344	Nut, hex.	2
15	J-GM-137204	Pin, cotter	2
16	J-641920	Cap, wheel hub	2
17	J-GM-137991	Screw	6
18	J-909393	Nut, hex.	12
19	J-GM-120382	Lockwasher	12
20	JM02119	Bolt, hex. hd.	12
	JM01255	Disc, wheel	2


STEERING

1	J-GM-124155	Bolt, hex. hd.	3
2	J-GM-178571	Lockwasher	6
3	J-GM-120370	Nut, hex.	3
4	J-809723	Shim, 0.25 mm thick	As req'd
5	J-803203	Shim, 1.00 mm thick	As req'd
6	J-803202	Shim, 3.20 mm thick	As req'd
7	J-666524	Grommet, steering column	1
8	J-A-1276	Clamp, steering column support	1
9	J-GM-120741	Bolt, hex. hd.	4

STEERING

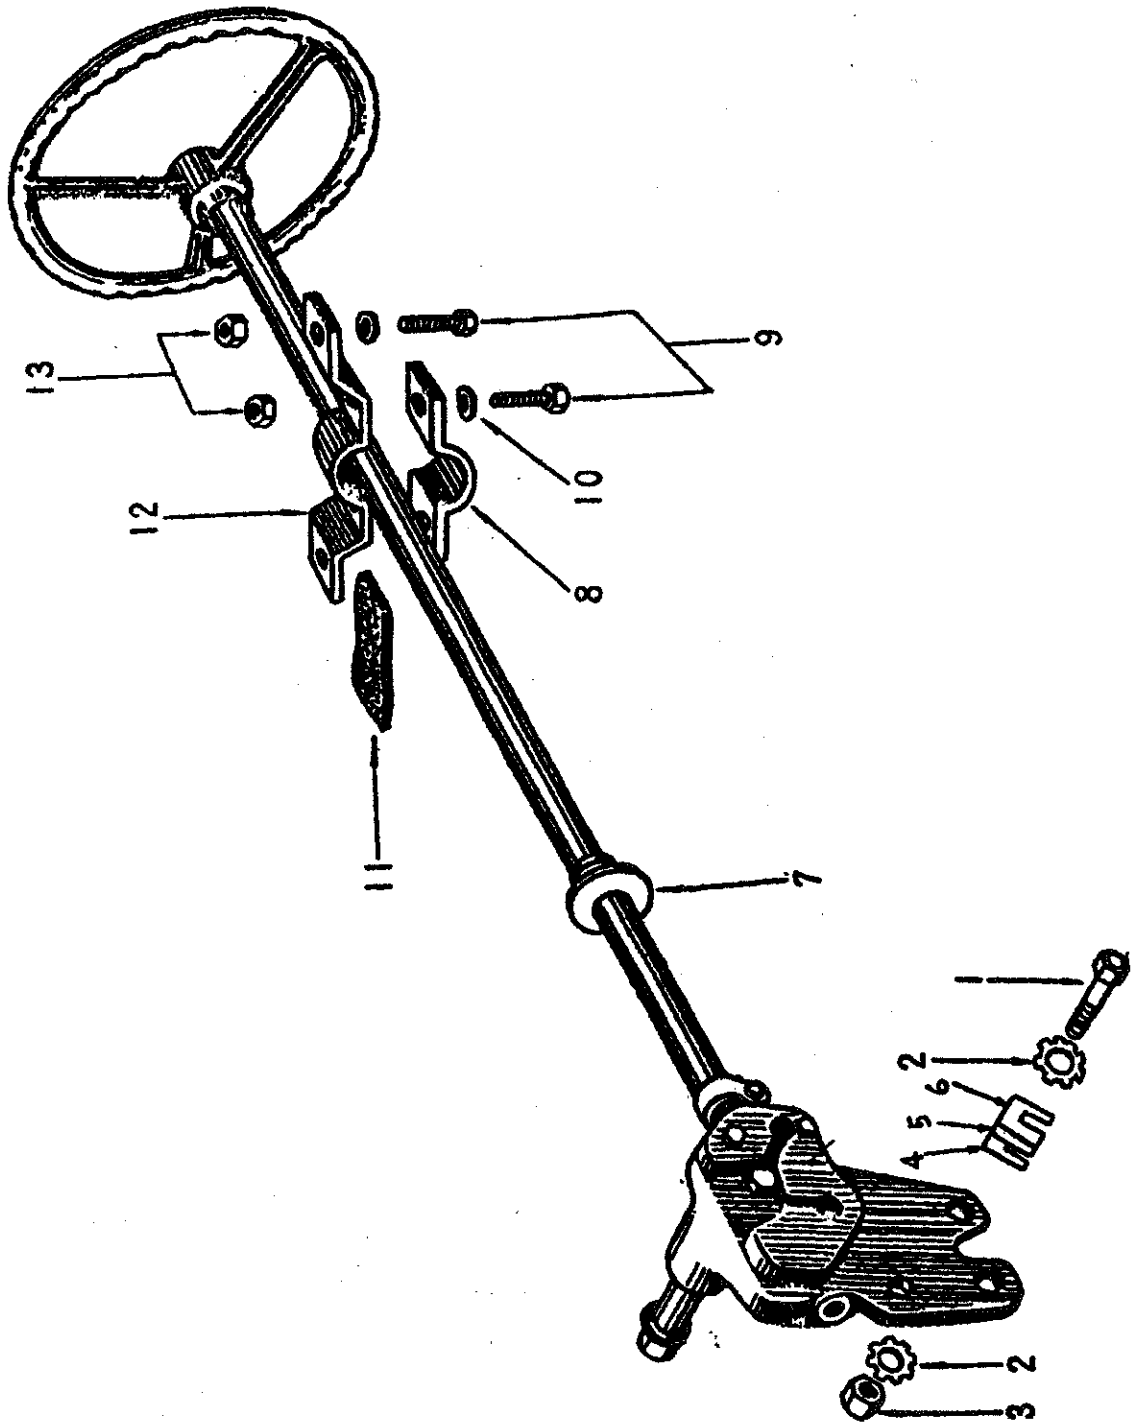

STEERING SYSTEM

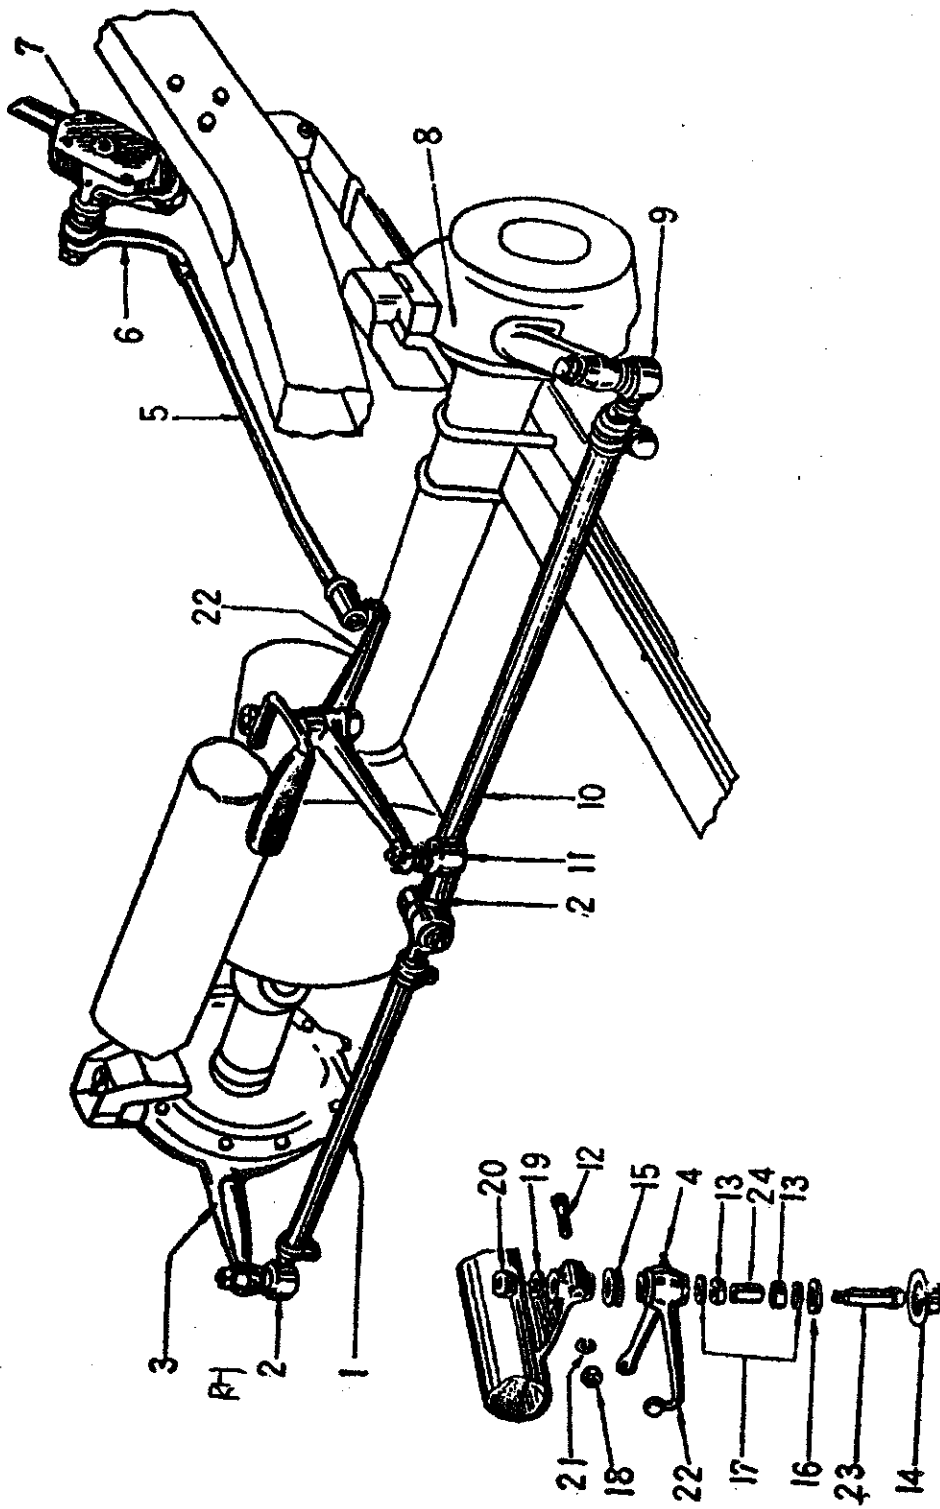

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------


STEERING (Continued)

10	J-GM-138485	Lockwasher	4
11	J-A-1277	Bushing, steering column support	1
12	J-808571	Support, steering column	1
13	J-GM-120368	Nut, hex.	4


STEERING SYSTEM

1	J-642057	Rod, tie, steering R.H. ass'y	1
2	J-A-838	Socket, tie rod R.H.	2
3	J-805784	Knuckle and arm R.H.	1
4	JM03092	Fitting	1
5	J-646618	Rod, connecting, steering ass'y	1
6	J-A-1116	Arm, steering	1
7	J-647694	Gear, steering	1
8	J-805783	Knuckle and arm L.H.	1
9	J-A-847	Socket, tie rod L.H. ass'y	1
10	J-642056	Rod, tie, steering L.H. ass'y	1
11	J-640178	Socket, tie rod	1
12	J-GM-124145	Bolt, bell crank	1
13	J-645664	Bearing, bell crank	2
14	JM04091	Cap	1
15	JM04092	Seal, bell crank	1
16	J-GM-131018	Washer, bell crank shaft	1
17	J-645663	Seal, bell crank bearing	2
18	J-GM-120370	Nut, hex.	1
19	J-GM-131016	Washer	1
20	J-649240	Nut, hex.	1
21	J-GM-120383	Lockwasher	1
22	JM04090	Crank, bell	1
23	JM04095	Shaft, bell crank	1
24	JM04094	Spacer, bell crank	1
	JM04462	Kit, steering bell crank	1
		Consists of:	
	J-645664	2 Bearing, bell crank	
	J-645663	2 Seal, bell crank	
	JM04095	1 Shaft, bell crank	
	JM04094	1 Spacer, bell crank	
	JM04092	1 Seal, bell crank	

### THE ROD STEERING

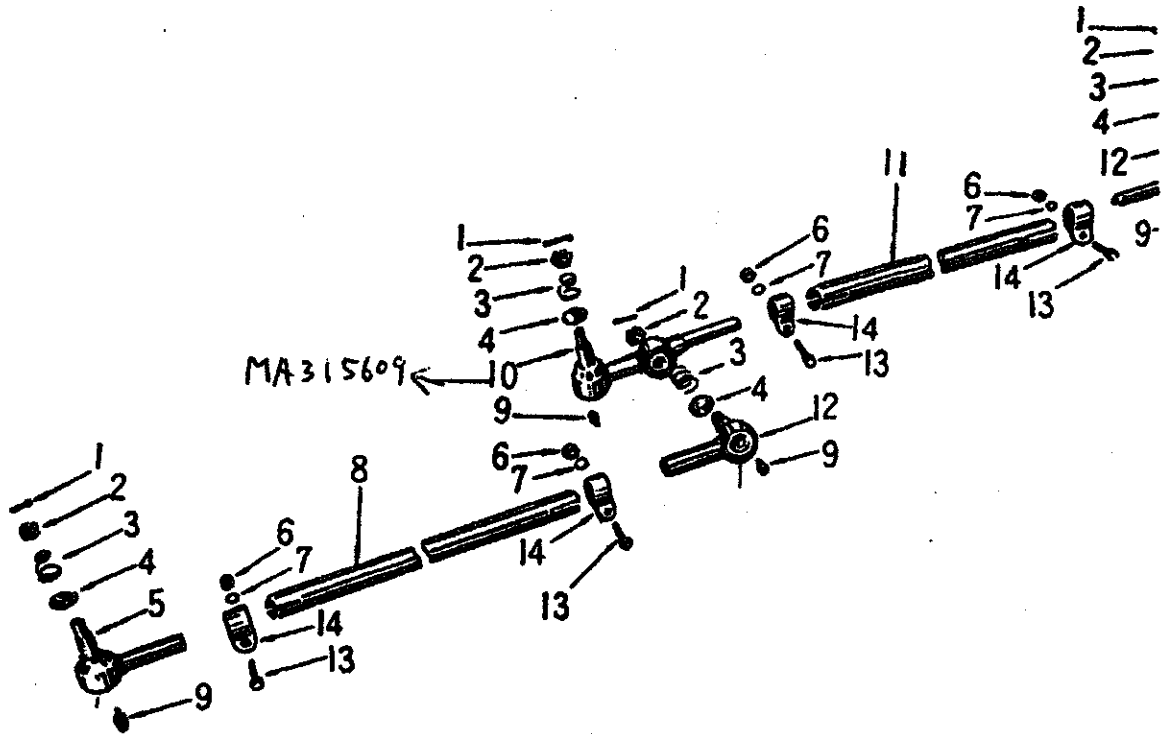

### STEERING CONNECTING ROD

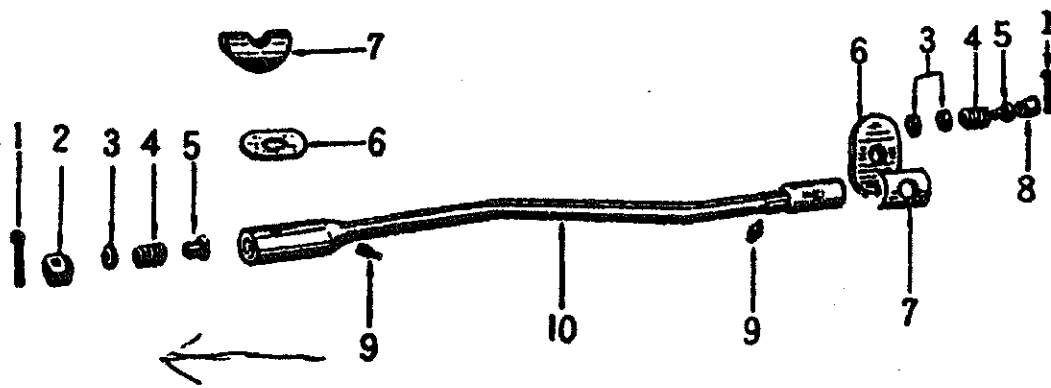

Key	Parts No.	Nomenclature	No. Req'd
<u>TIE ROD STEERING</u>			
1	J-GM-108629	Pin, cotter	4
2	J-GM-102647	Nut, hex.	4
3	J-A-6305	Spring, tie rod stud	4
4	J-A-844	Cover, dust tie rod socket	4
5	J-A-847	Socket, tie rod L.H. ass'y	1
6	J-GM-103025	Nut, hex.	4
7	J-GM-107985	Lockwasher	4
8	J-642058	Rod, tie, steering L.H.	1
9	JM01817	Fitting	4
10	J-640178	Socket, tie rod	1
11	J-642059	Rod, tie, steering R.H.	1
12	J-A-838	Socket, tie rod R.H. ass'y	2
13	J-A-875	Bolt, hex.	4
14	J-A-837	Clamp, tie rod	4

STEERING CONNECTING ROD


1	J-GM-137214	Pin, cotter	2
2	J-630756	Plug, large	1
3	J-630755	Seat, ball	3
4	J-630754	Spring, ball seat	2
5	J-630753	Plug, spring	2
6	J-A-622	Cover, dust	2
7	J-A-623	Shield, dust	2
8	J-630757	Plug, adjusting, small	1
9	JM03092	Fitting	2
10	J-646620	Rod, connecting	1
	J-800695	Kit, steering connecting rod	1
		Consists of:	
	J-630756	1 Plug, large	
	J-630757	1 Plug, adjusting small	
	J-630753	2 Plug, spring	
	J-630755	3 Seat, ball	
	J-630754	2 Spring, ball seat	

148119

13721424300



STEERING GEAR

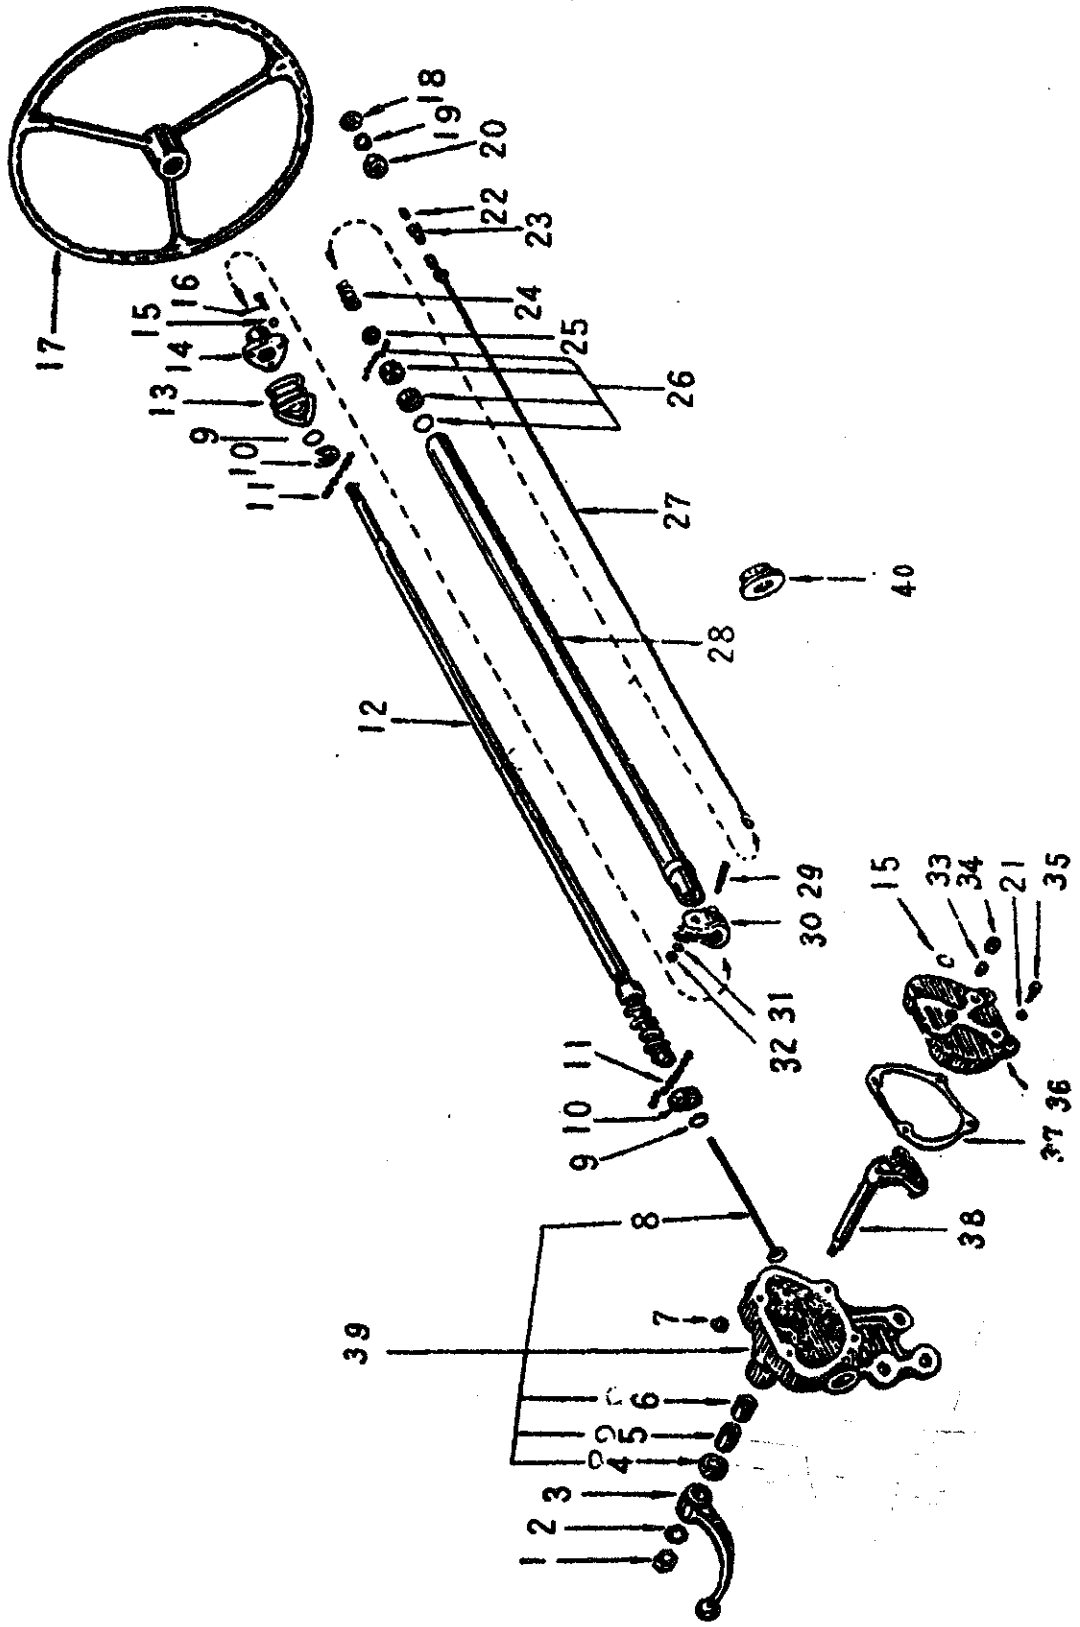

Key	Parts No.	Nomenclature	No. Req'd
<u>STEERING GEAR</u>			
1	J-639115	Nut, shaft, steering gear lever	1
2	J-GM-103325	Lockwasher	1
3	J-A-1116	Arm, steering gear	1
4	JM02453	Oil seal, lever shaft	1
5	J-639091	Bushing, housing, inner	1
6	J-639090	Bushing, housing, outer	1
7	J-GM-103865	Plug, filler	1
8	J-639092	Cover and tube	1
9	J-639103	Ring, retaining	2
10	J-639102	Cup, ball, cam bearing	2
11	J-639104	Ball	22
12	J-647693	Tube and cam	1
13	J-A-6760	Shim set, housing, upper cover	1
		Consists of:	
	J-639108	2 Shim, 0.05 mm thick	
	J-639109	2 Shim, 0.08 mm thick	
	J-639110	2 Shim, 0.25 mm thick	
14	J-A-1760	Cover, upper	1
15	J-GM-108579	Lockwasher	5
16	J-639107	Bolt, hex. hd.	3
17	JM02548	Wheel, steering	1
18	J-804623	Button, horn	1
19	J-801427	Cap, contact	1
20	J-801425	Nut, steering wheel	1
21	J-639121	Lockwasher	2
22	J-638884	Spring, horn button	1
23	J-638885	Cup, horn button spring	1
24	J-639191	Spring, column bearing	1
25	J-801423	Seat, bearing spring	1
26	J-801422	Bearing, steering column	1
27	J-801428	Cable and terminal, horn	1
28	J-647690	Column and bearing	1
29	J-GM-123798	Bolt, hex. hd.	1
30	J-A-636	Clamp, steering column	1
31	J-GM-138538	Lockwasher	1
32	J-GM-120368	Nut, hex.	1
33	J-639118	Screw, adjusting	1
34	J-GM-124929	Nut, hex.	1

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------


STEERING GEAR (Continued)

35	J-639120	Bolt, hex. hd.	4
36	J-639116	Cover, side, gear housing	1
37	J-639119	Gasket, side cover	1
38	J-A-745	Shaft and lever	1
39	J-646289	Housing ass'y	1
40	J-666524	Grommet, steering column	1
	JM02619	Kit, steering gear shaft and lever	1
		Consists of:	
	J-639090	2 Bushing, housing inner	
	J-639119	1 Gasket, side cover	
	JM02453	1 Oil seal, lever shaft	
	J-A-745	1 Shaft and lever	

FRAME


	J-808072	Frame ass'y	1
1	J-645119	Bar, bumper, front	1
2	J-A-1283	Bracket, front brake	1
3	J-A-500	Bracket, pivot, front and rear	4
4	J-801662	Bracket, retainer	1
	J-801664	Bushing, pedal shaft retainer	2
5	J-A-544	Bracket, shackle, front and rear	4
6	JM-04082	Bracket, steering bell crank	1
7	J-647919	Bracket, support, engine, front, left	1
8	J-647025	Bracket, support, engine	1
9	J-647454	Bracket, w/shaft front	2
10	J-647350	Bracket, w/shaft rear	2
11	J-A-1150	Cross member, frame center	1
12	J-646942	Cross member, frame intermediate rear	1
13	JM01570	Cross member, frame rear	1
	J-GM-120758	Bolt, hex. )	
	J-GM-103026	Nut, hex. ) Engine rear cross	4
	JM-03191	Lockwasher ) member to frame	4
	J-GM-120647	Bolt, hex. )	4
	JM-00819	Lockwasher ) Frame side rail	2
	J-GM-103026	Nut, hex. ) to member	2
			2

FRAME

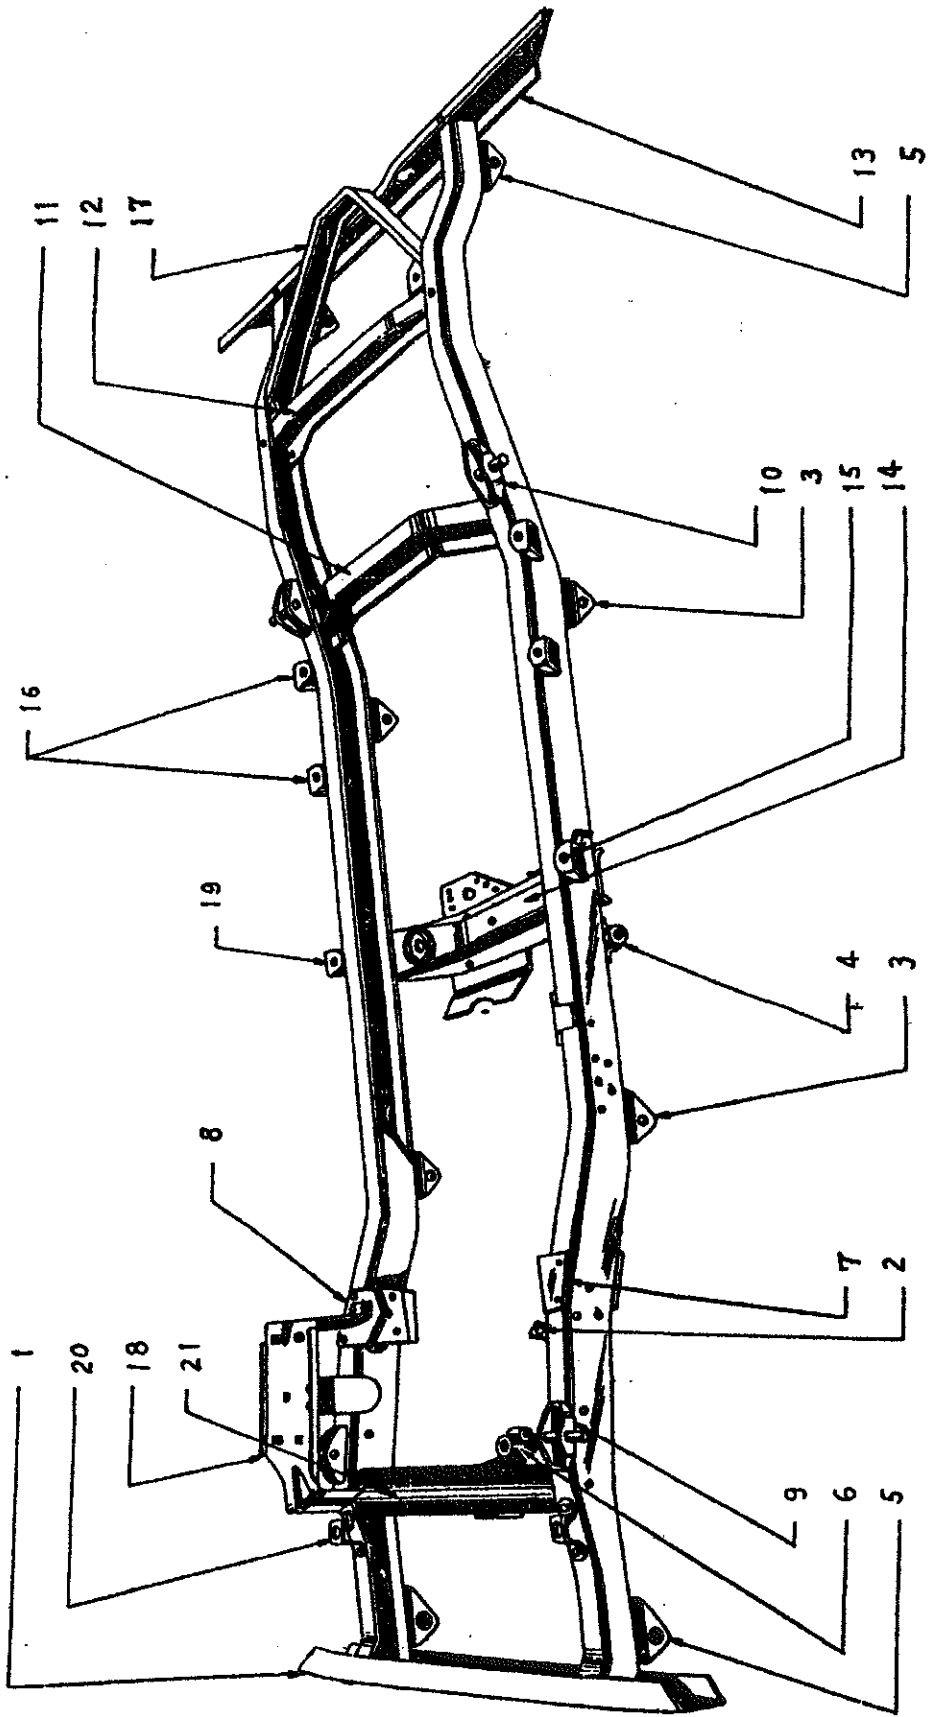

Key	Parts No.	Nomenclature	No. Req'd
<u>FRAME</u> (Continued)			
14	J-649705	Cross member, support rear	1
	J-A-914	Cup, retaining, transfer case insulator	1
15	J-645702	Outrigger, body, No.1 L.H.	1
16	J-645072	Outrigger body, No.2 and No.3	4
	J-640689	Plate, skid under frame	1
17	J-647418	Reinforcement, frame, rear	1
18	J-647306	Support w/brace ass'y	1
19	J-645071	Outrigger, body No.1	1
20	J-646932	Bracket, radiator guard to frame	2
21	J-647030	Frame, cross tube front	1

### PINTLE HOOK

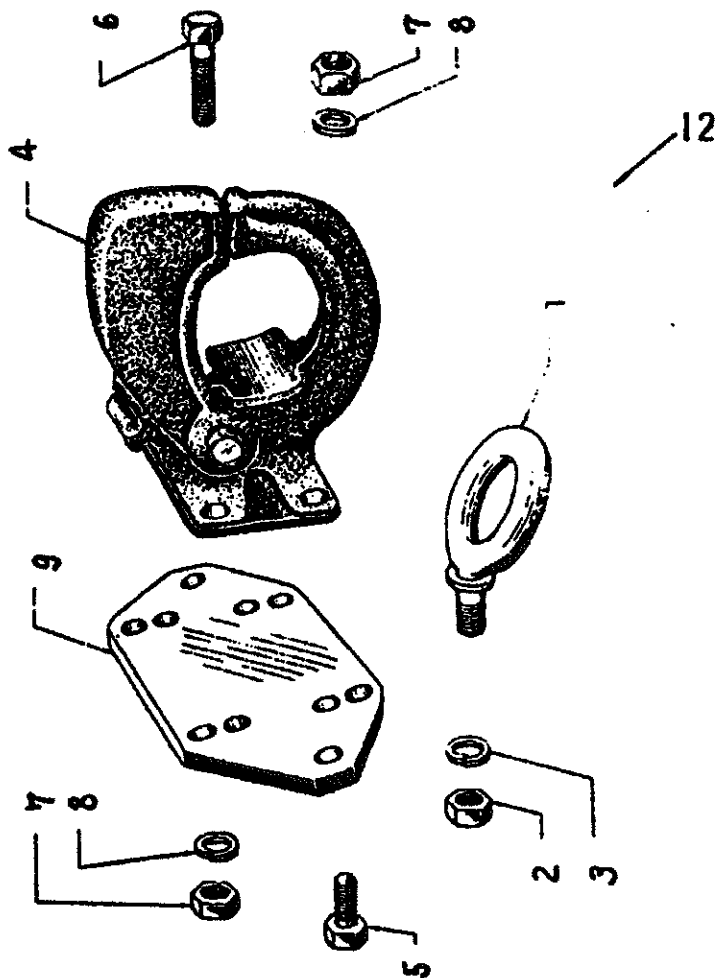

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

PINTLE HOOK


	JM02483	Kit, pintle hook	
		Consists of:	
1	JM00229	2 Bolt eye	
2	J-GM-120378	2 Nut hex.	
3	J-GM-120384	2 Washer, lock	
4	JM00265	1 Hook, pintle	
5	J-GM-123841	4 Bolt, hex.	
6	J-GM-120919	4 Bolt, hex.	
7	J-GM-271506	8 Nut, hex.	
8	J-GM-120383	8 Lockwasher	
9	JM00441	1 Plate	
	JM03154	1 Instruction sheet, pintle hook	

JM02182 10 枚取付

FRONT SPRING AND SHOCK ABSORBER

1	JM02180	Spring ass'y, front	2
		Consists of:	
	JM02180-1	1 Leaf, front spring No.1	
	JM02180-2	1 Leaf, front spring No.2	
	JM02180-3	1 Leaf, front spring No.3	
	JM02180-4	1 Leaf, front spring No.4	
	JM02180-5	1 Leaf, front spring No.5	
	JM02180-6	1 Leaf, front spring No.6	
	JM02180-7	1 Leaf, front spring No.7	
	JM02180-8	1 Leaf, front spring No.8	
	JM02180-13	1 Bushing, eye	
	JM02180-11	1 Nut, center bolt	
	JM02180-12	1 Bolt, center	
	JM02180-10	2 Clip, inner	
	JM02180-9	2 Clip, outer	
2	J-384228	Bolt, pivot	2
3	JM01155	Nut, hex.	2
4	J-GM-137185	Pin, cotter	2
5	JM03092	Fitting	6
6	J-A-513	Bolt, "U" spring shackle L.H.T.	1
7	J-A-514	Bolt, "U" spring shackle R.H.T	1


FRONT SPRING AND SHOCK ABSORBER

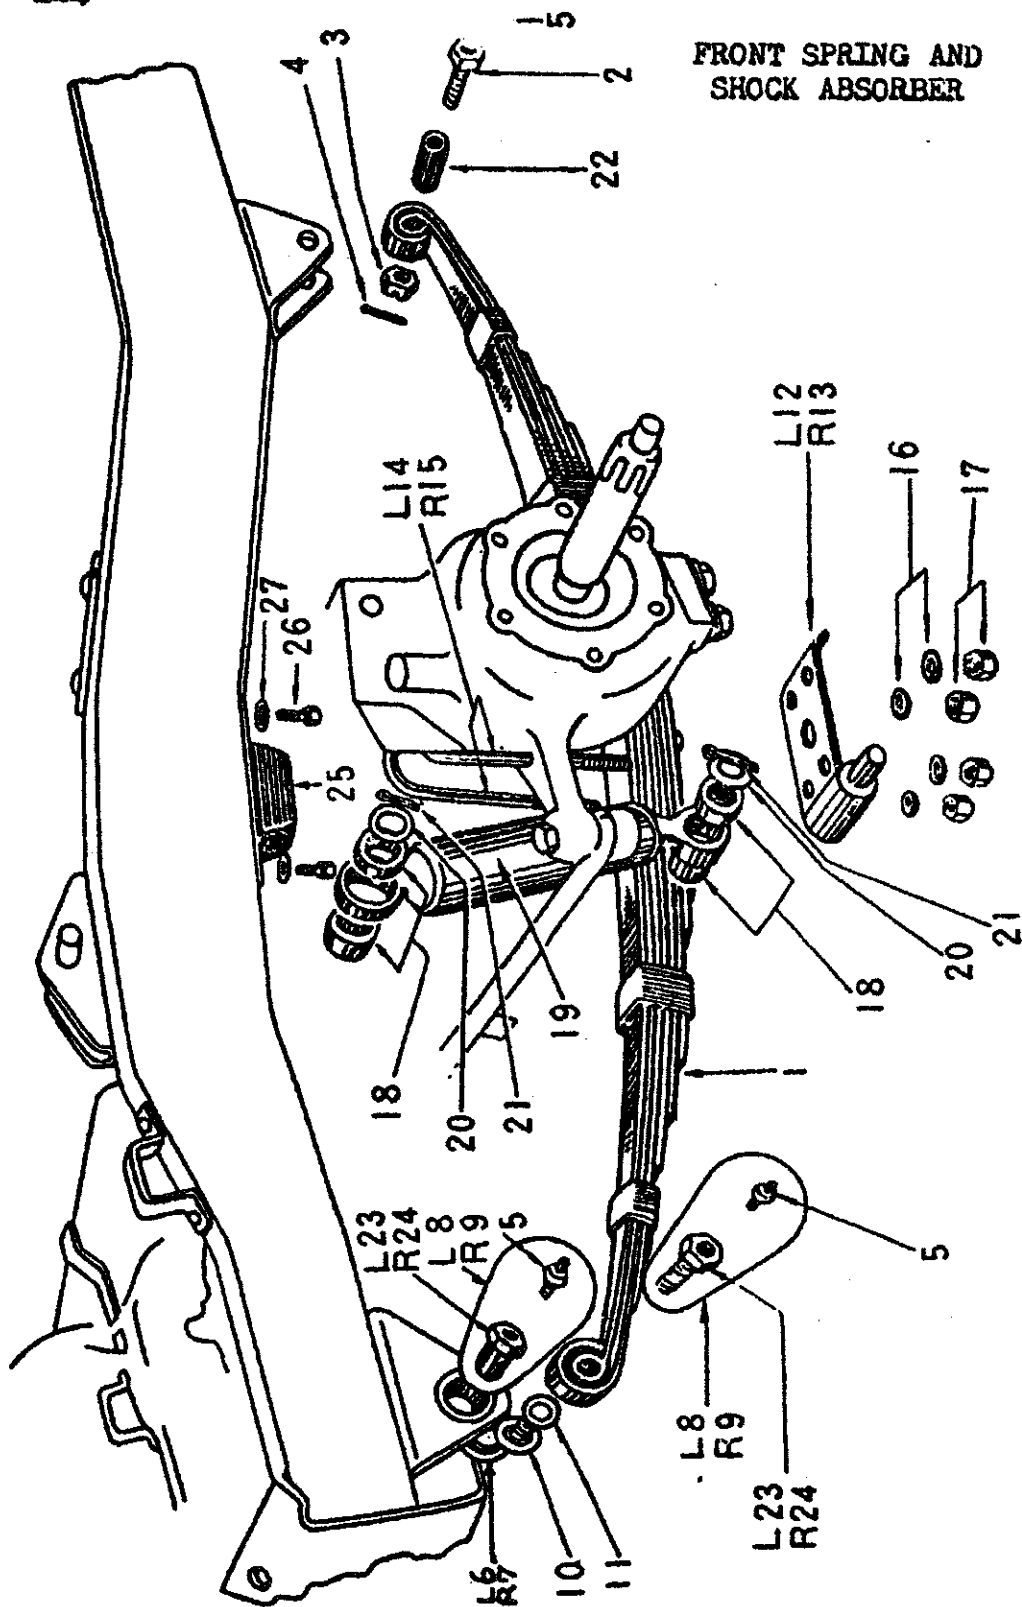



Key	Parts No.	Nomenclature	No. Req'd
<u>FRONT SPRING AND SHOCK ABSORBER (Continued)</u>			
8	JM01471	Bushing, spring shackle L.H. T.	1
9	JM01470	Bushing, spring shackle R.H. T.	3
10	J-A-1252	Retainer, grease seal	4
11	J-A-515	Seal, grease	4
12	J-A-572	Plate and shaft, L.H.	1
13	J-A-568	Plate and shaft, R.H.	1
14	JM02916	Bolt, "U" spring	3
15	JM02917	Bolt, "U" spring	1
16	J-GM-13110	Lockwasher	8
17	J-339372	Nut, clip to axle	8
18	J-637936	Bushing, mounting pin	8
19	JM02440	Absorber, shock, front	2
20	J-641916	Washer, mounting pin	4
21	J-GM-103407	Pin, cotter	4
22	JM02180-13	Bushing, eye	2
23	JM01473	Bushing, spring shackle L.H. T.	1
24	JM01472	Bushing, spring shackle R.H. T.	3
25	J-906826	Bumper, axle	2
	J-802061	Kit, spring shackle "U" bolt L.H.T.	1
		Consists of:	
	J-A-513	1 Bolt, "U" L.H.T.	
	JM01471	1 Bushing, L.H.T.	
	JM01470	1 Bushing, R.H.T.	
	J-A-1252	2 Retainer	
	J-A-515	2 Seal, grease	
	J-802062	Kit, spring shackle "U" bolt R.H. T.	1
		Consists of:	
	J-A-514	1 Bolt, "U" R.H.T.	
	JM01470	2 Bushing, R.H.T.	
	J-A-1252	2 Retainer	
	J-A-515	2 Seal, grease	
26	J-GM-120741	Bolt, hex. hd.	4
27	J-GM-120214	Lockwasher	4

### REAR SPRING AND SHOCK ABSORBER

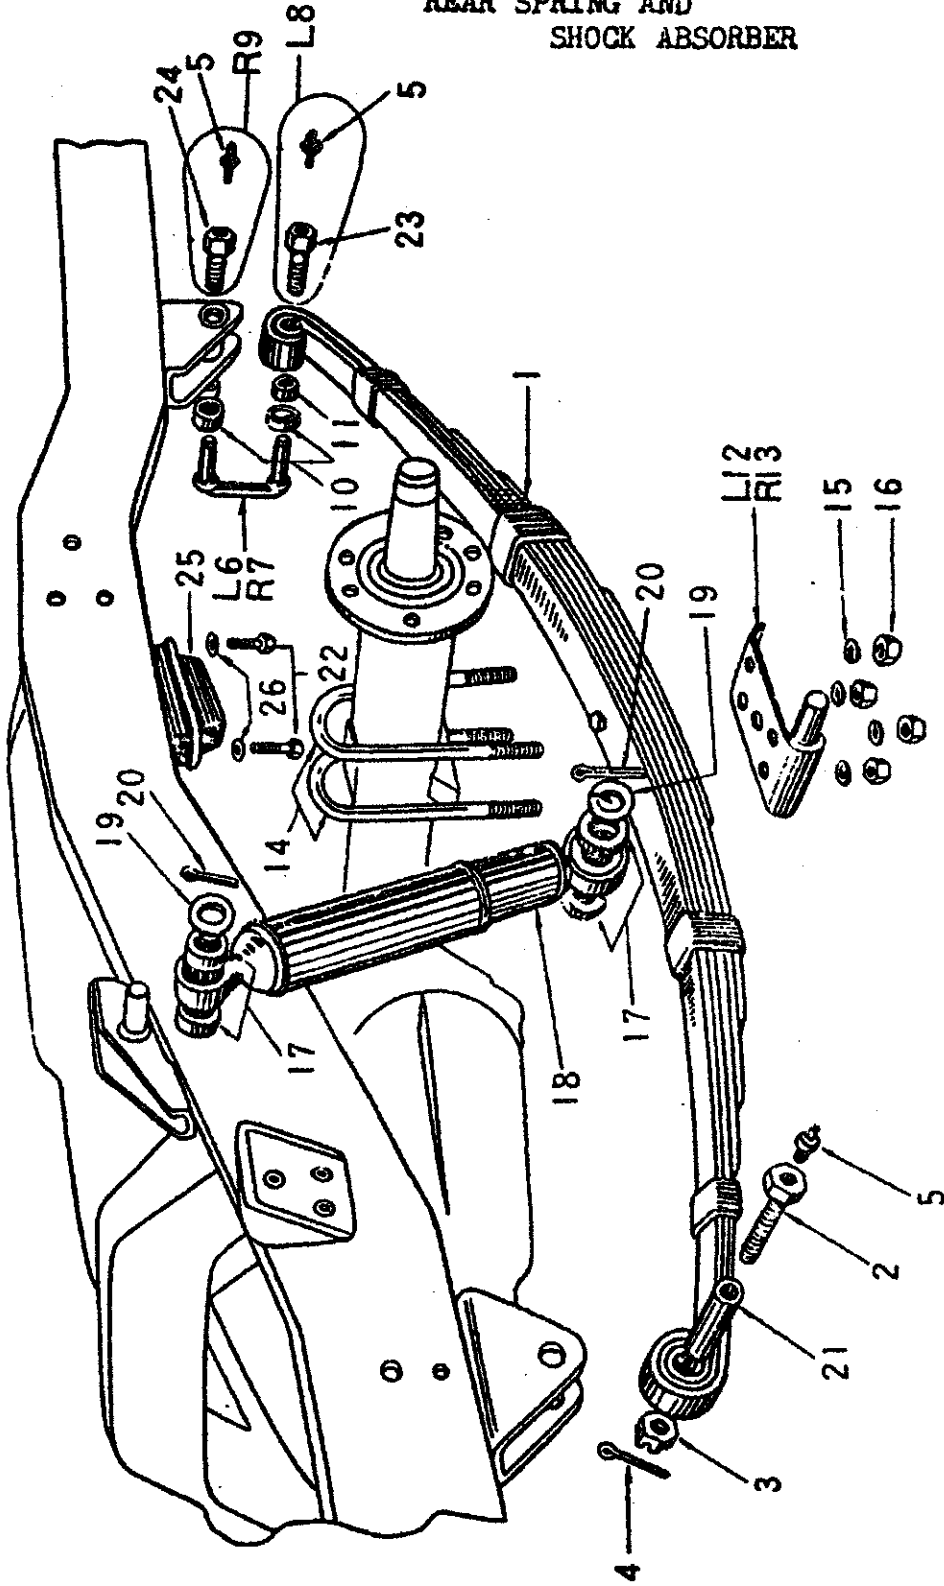

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

REAR SPRING AND SHOCK ABSORBER

1	JM02181	Spring ass'y, rear Consists of:	2
	JM02181-1	1 Leaf, rear spring No.1	
	JM02181-2	1 Leaf, rear spring No.2	
	JM02181-3	1 Leaf, rear spring No.3	
	JM02181-4	1 Leaf, rear spring No.4	
	JM02181-5	1 Leaf, rear spring No.5	
	JM02181-6	1 Leaf, rear spring No.6	
	JM02181-7	1 Leaf, rear spring No.7	
	JM02181-8	1 Leaf, rear spring No.8	
	JM02181-9	1 Leaf, rear spring No.9	
	JM02181-10	1 Leaf, rear spring No.10	
	JM02181-11	1 Leaf, rear spring No.11	
	JM02181-12	1 Bushing, eye	
	JM02181-13	1 Nut, center bolt	
	JM02181-14	1 Bolt, center	
	JM02181-15	2 Clip, inner	
	JM02181-16	2 Clip, outer	
2	J-384228	Bolt, pivot	2
3	JM01155	Nut, hex.	2
4	J-GM-137185	Pin, cotter	2
5	JM03092	Fitting	6
6	J-A-513	Bolt, "U" spring shackle L.H.T.	1
7	J-A-514	Bolt, "U" spring shackle R.H.T.	1
8	JM01471	Bushing, spring shackle L.H.T.	1
9	JM01470	Bushing, spring shackle R.H.T.	3
10	J-A-1252	Retainer, grease seal	4
11	J-A-515	Seal, grease	4
12	J-640932	Plate and shaft L.H.	1
13	J-640938	Plate and shaft R.H.	1
14	J-642987	Bolt, "U" spring	4
15	J-GM-131100	Lockwasher	8
16	J-339372	Nut, clip to axle	8
17	J-637936	Bushing, mounting pin	8
18	JM02441	Absorber, shock, rear	2
19	J-641916	Washer, mounting pin	4
20	J-GM-103407	Pin, cotter	4
21	JM02181-12	Bushing, eye	2

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------


REAR SPRING AND SHOCK ABSORBER (Continued)

22	J-GM-120741	Bolt, hex. hd.	4
23	JM01473	Bushing, spring shackle L.H.T.	1
24	JM01472	Bushing, spring shackle R.H.T.	3
25	J-906826	Bumper, axle	2
26	J-GM-120214	Lockwasher	4
	J-802061	Kit, spring shackle "U" bolt L.H.T.	1
		Consists of:	
	J-A-513	1 Bolt, "U" L.H.T.	
	JM01471	1 Bushing, L.H.T.	
	JM01470	1 Bushing, R.H.T.	
	J-A-1252	2 Retainer	
	J-A-515	2 Seal, grease	
	J-802062	Kit, spring shackle "U" bolt R.H.T.	1
		Consists of	
	J-A-514	1 Bolt, "U" R.H.T.	
	JM01470	2 Bushing, R.H.T.	
	J-A-1252	2 Retainer	
	J-A-515	2 Seal, grease	

FENDER

1	J-681229	Fender, front L.H.	1
	J-681230	Fender, front R.H.	1
2	J-663548	Catch, hood ass'y	2
3	J-GM-120854	Bolt, hex. hd.	4
4	J-GM-120386	Washer, plain	4
5	J-GM-120380	Lockwasher	4
6	J-GM-120375	Nut, hex.	4
7	J-A-2843	Brace, front fender L.H.	1
	J-A-2844	Brace, front fender R.H.	1
8	J-GM-120388	Washer, plain	6
9	J-680448	Screw and lockwasher	6
10	J-GM-122007	Bolt, hex. hd.	6
11	J-A-11775	Lockwasher	8
12	J-GM-120229	Bolt, hex. hd.	2
13	J-A-2662	Anti-squeak, front fender lower	2
14	J-GM-120214	Lockwasher	8

FENDER

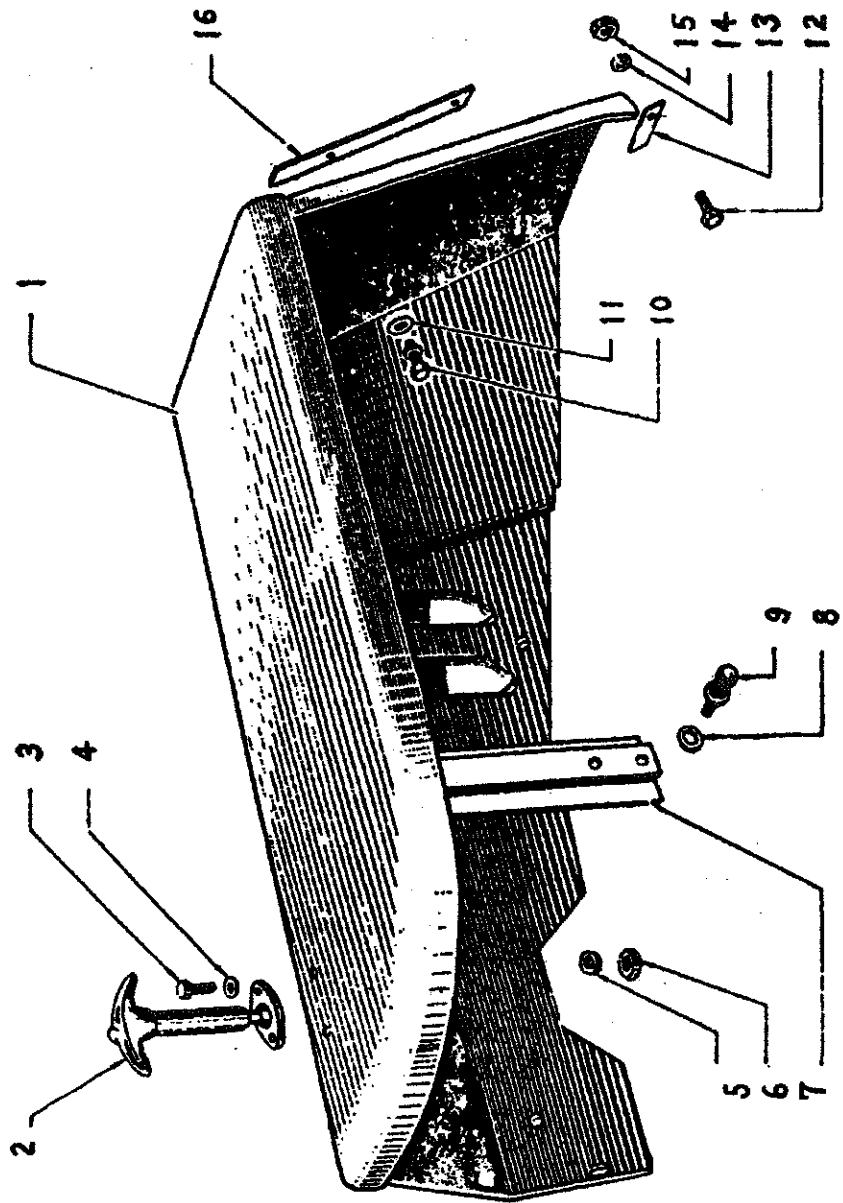

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

FENDER (Continued)

15	J-GM-120376	Nut, hex.	2
16	J-A-3158	Anti-squeak, front fender upper	2

BODY STEP

	JM02430	Step left ass'y	1
	JM02431	Step right ass'y	1


HOOD

1	J-681334	Hood ass'y	1
2	JM03932	Hinge, hood	1
3	JM03932-3	Pin, hood hinge	1
4	J-663640	Bracket, hood catch	2
5	J-GM-191985	Screw and lockwasher	4
6	J-GM-120386	Washer, plain	4
7	J-GM-120375	Nut, hex.	4
8	J-GM-443874	Screw, hex. hd.	4
9	J-GM-120385	Washer, plain	4
10	J-GM-120217	Lockwasher	4
11	J-GM-120361	Nut, hex.	4
12	JM04562	Bumper ass'y, hood	2
13	JM03775	Bumper, hood	2
14	JM03776	Liner, hood bumper	2
15	J-GM-113454	Rivet	8
16	J-GM-120854	Bolt, hex. hd.	5
17	J-GM-120380	Lockwasher	5
18	J-GM-120392	Washer, plain	5


BODY ASS'Y

	J-681428	Body, front ass'y	1
	JM00416	Body, rear ass'y	1

HOOD

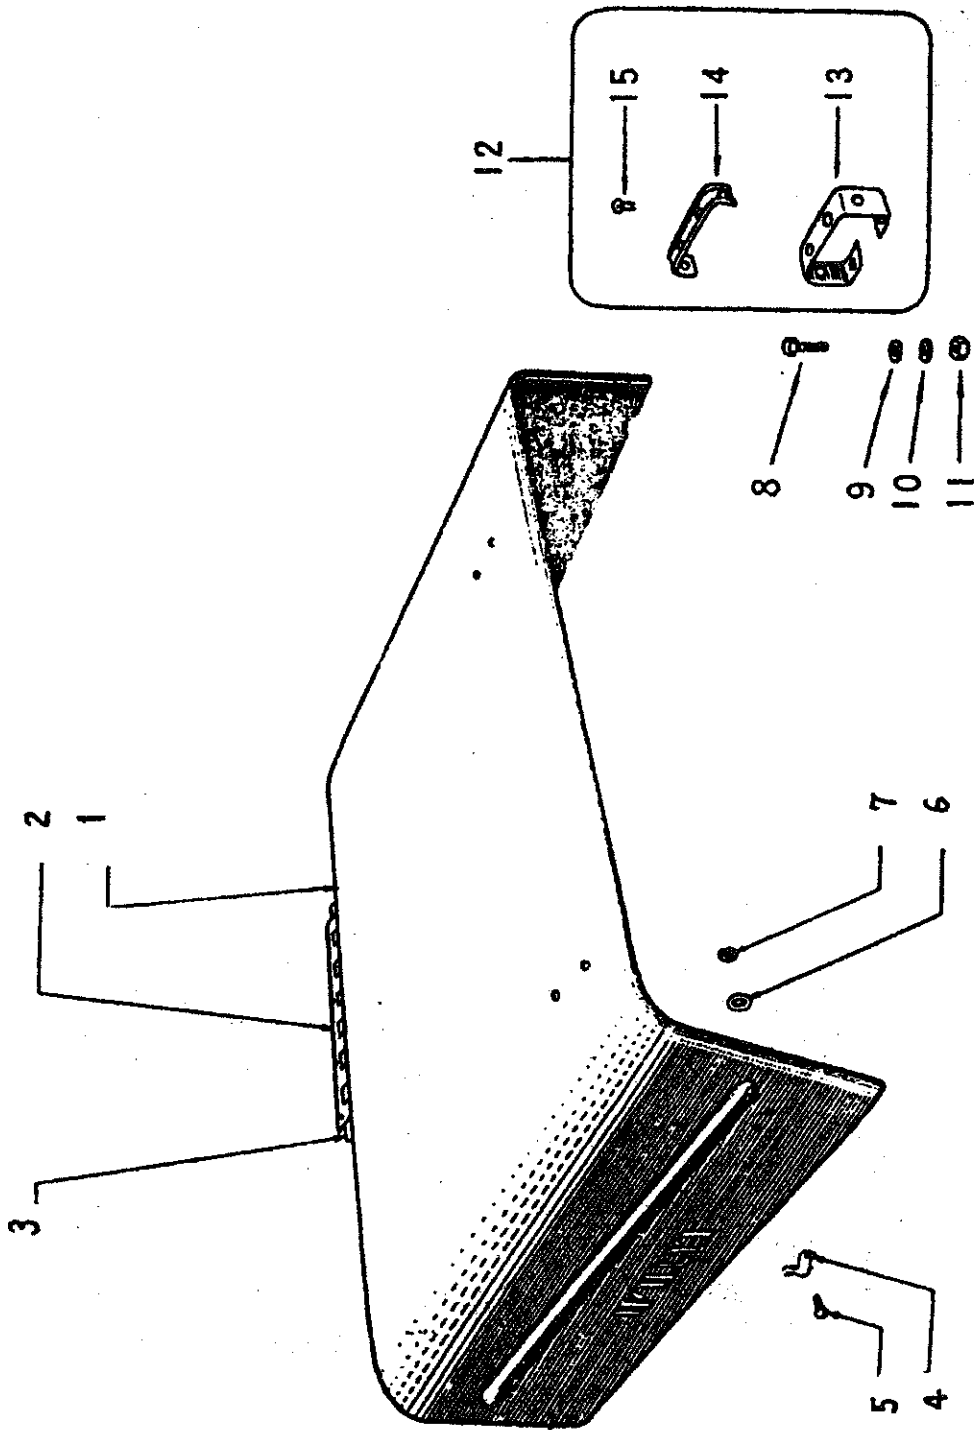

HOLDING BAR AND GROMMET

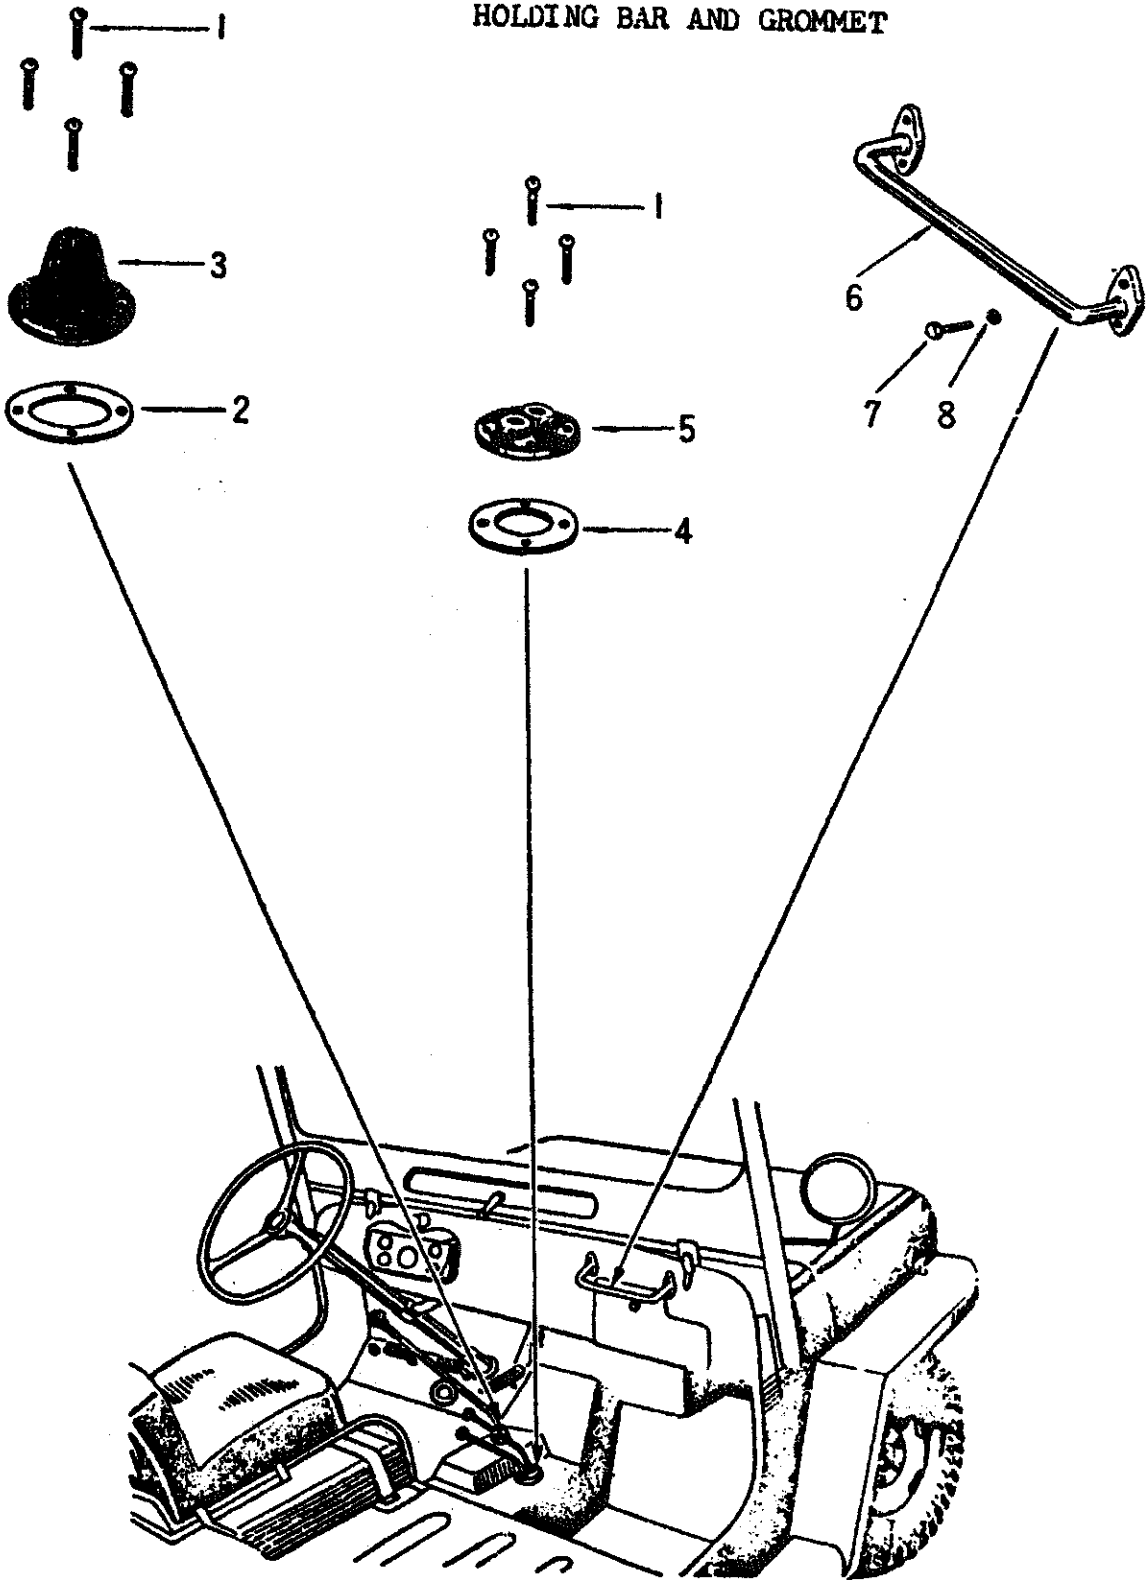



---


Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

---

HOLDING BAR AND GROMMET

1	J-GM-161895	Screw, pan hd. tapping	8
2	J-649890	Retainer, cover, gear shift lever	1
3	J-664379	Cover, housing gear shift lever	1
4	J-663793	Ring, grommet transfer shift lever	1
5	J-666611	Grommet, gear shift transfer case	1
6	JM00676	Bar, holding ass'y	1
7	J-GM-427752	Bolt, hex. hd.	4
8	J-GM-120380	Washer, spring	4

GLOVE COMPARTMENT LID

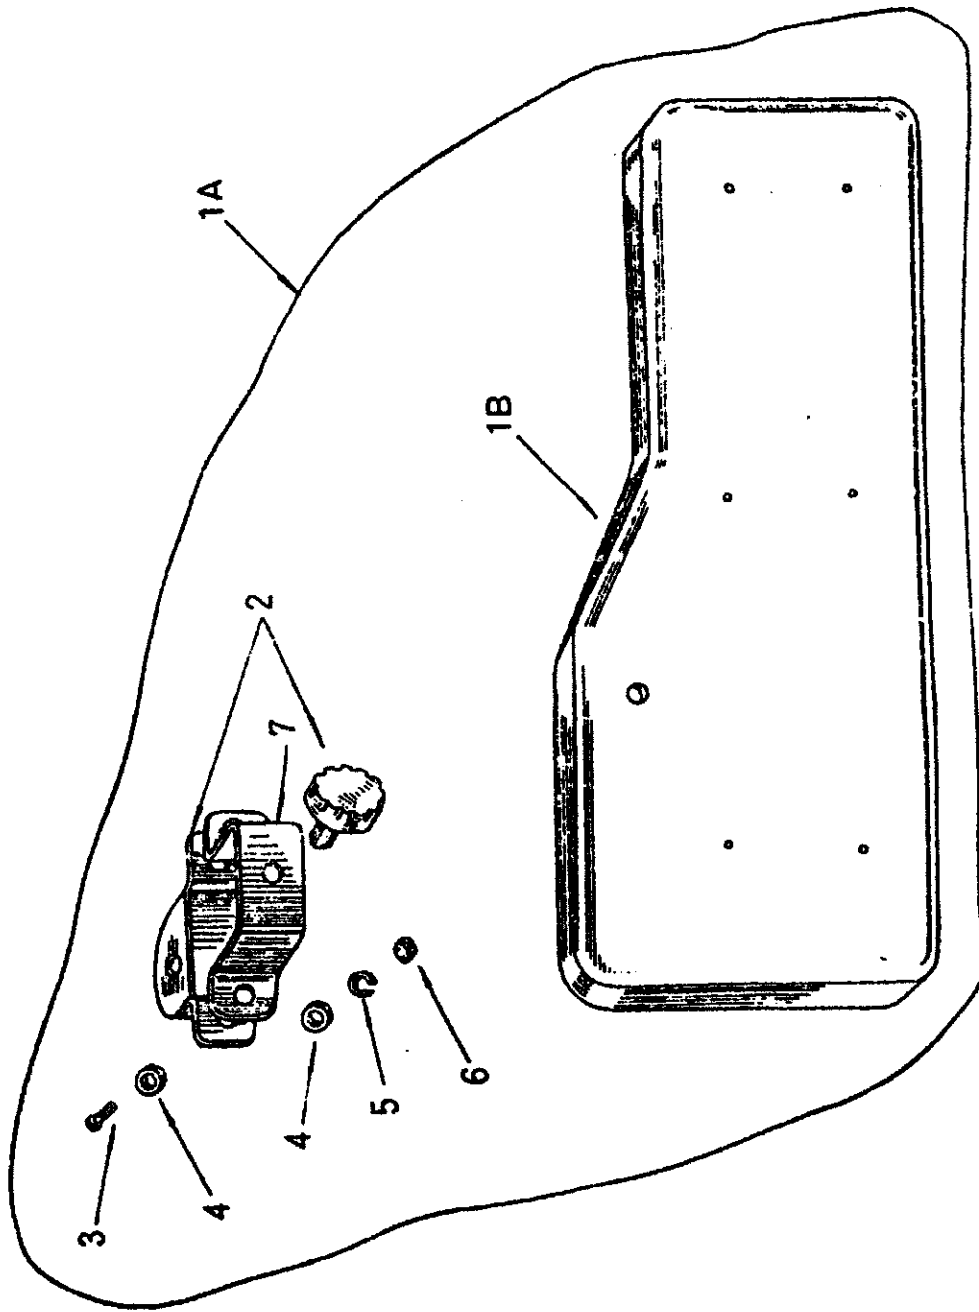

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

GLOVE COMPARTMENT LID

1A	JM02161	Lid, glove compartment ass'y complete	1
1B	JM00579	Lid, glove compartment	1
2	JM00276	Key, glove compartment lid	1
3	J-GM-120211	Screw, rd. hd.	2
4	J-GM-120385	Washer, plain	4
5	J-GM-120217	Lockwasher	2
6	J-GM-120361	Nut, hex.	2
7	JM00284	Plate, glove compartment lid	1


BODY SIDE

J-663089	Bracket, top bow, front, left ass'y	1
J-663090	Bracket, top bow, front right ass'y	1
J-663679	Bracket, top bow rear left ass'y	1
J-663680	Bracket, top bow rear right ass'y	1
JM01707	Bracket, rear seat left	2
JM01708	Bracket, rear seat right	2
JM00417	Panel, body side left ass'y	1
JM00418	Panel, body side right ass'y	1
JM00419	Panel, body side and rear, left ass'y	1
JM00420	Panel, body side and rear right ass'y	1
JM00423	Panel, body side left ass'y	1
JM00424	Panel, body side right ass'y	1

REAR BODY


J-663415	Panel, body rear, center ass'y	1
JM00425	Panel, body rear, left ass'y	1
JM00426	Panel, body rear, right ass'y	1
JM01633	Cover, trailer socket	1

DRIVER SEAT

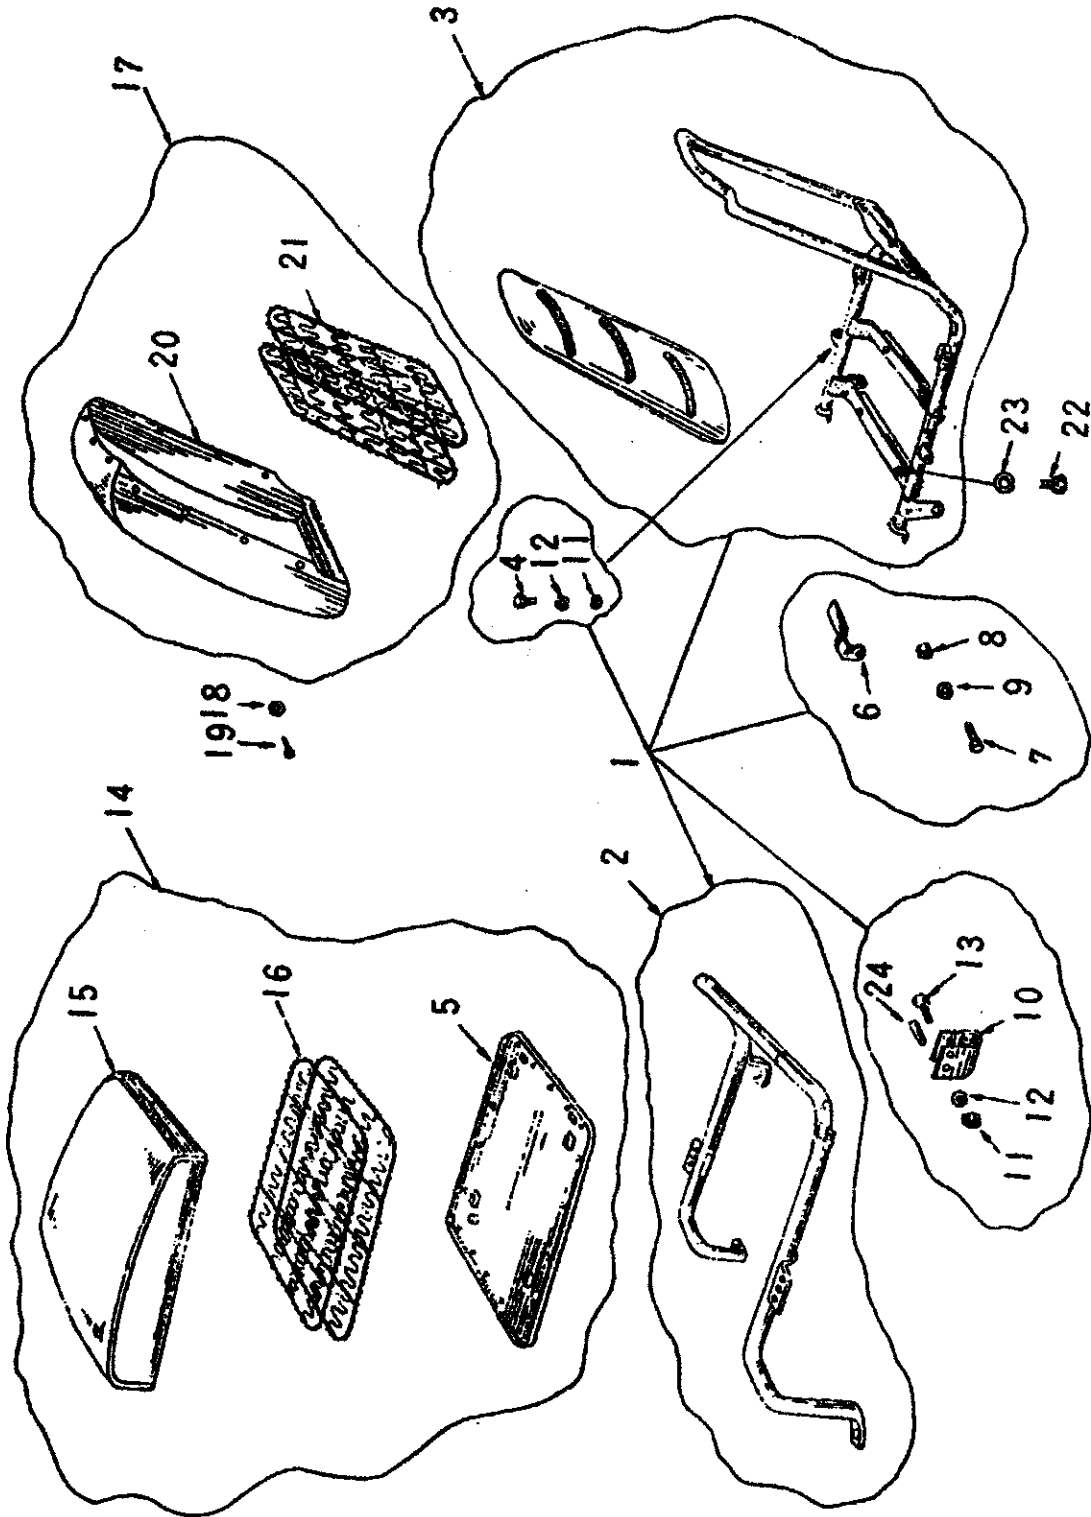


Key	Parts No.	Nomenclature	No. Req'd
<u>DRIVER SEAT</u>			
	JM02313	Seat, driver ass'y	1
1	JM02314	Frame, driver seat ass'y	1
2	JM00767	Frame, driver seat ass'y lower	1
3	JM00771	Frame, driver seat ass'y upper	1
4	J-GM-120228	Bolt, hex. hd.	2
5	JM01286	Pan, driver seat ass'y	1
6	JM00764	Plate, driver seat	2
7	J-GM-120228	Bolt, hex. hd.	2
8	J-GM-120376	Nut, hex.	2
9	J-GM-120214	Lockwasher	2
10	JM00765	Plate, "U" driver seat	2
11	J-GM-120376	Nut, hex.	6
12	J-GM-120214	Lockwasher	6
13	J-GM-122045	Bolt, hex. hd.	4
14	JM02319	Cushion, driver seat ass'y	1
15	JM02319-1	Cover, driver seat	1
16	JM02320	Spring, cushion driver seat	1
17	JM01524	Back, driver seat, ass'y	1
18	J-53732	Washer, plain	12
19	J-52990	Screw, oval hd.	12
20	JM01524-1	Cover, driver seat back	1
21	JM01303	Spring, cushion driver seat back	1
22	J-GM-120741	Bolt, hex. hd.	2
23	J-GM-120214	Lockwasher	2
24	JM00762-6	Pipe	4

SAFETY BAND

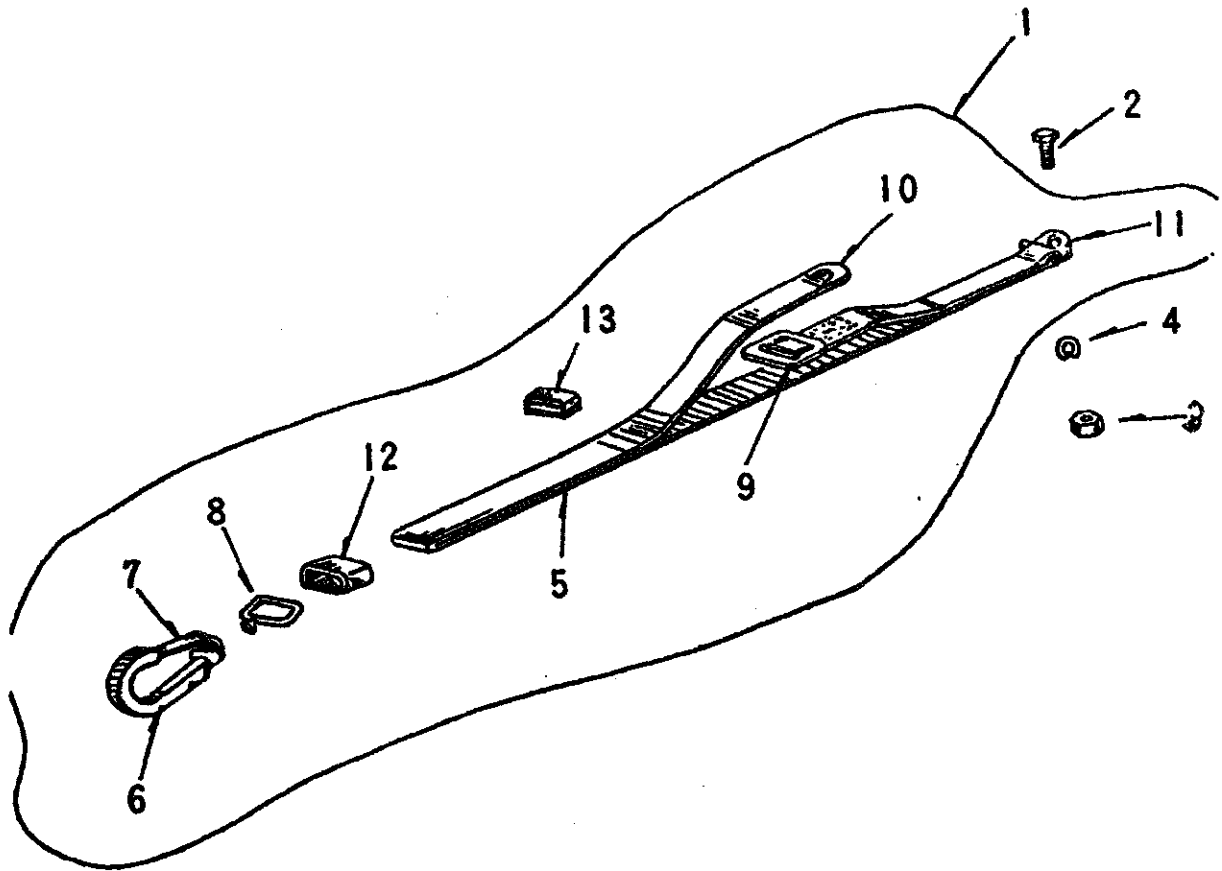

Key	Parts No.	Nomenclature	No. Req'd
<u>SAFETY BAND</u>			
1	JM00024	Band, safety, ass'y	2
2	JM00026	Bolt, hex. hd.	2
3	J-GM-120377	Nut, hex.	2
4	J-GM-120381	Lockwasher	2
5	JM00024-1	Band, safety	2
6	JM00024-2	Hook, safety band	2
7	JM00024-3	Spring, hook safety band	2
8	JM00024-4	Ring, safety band	2
9	JM00024-5	Plate, safety band	2
10	JM00024-6	Fixture, end, safety band	2
11	JM00024-7	Fixture, stop, safety band	2
12	JM00024-8	Ring, cloth, safety band	2
13	JM00024-9	Plate, safety band	2

FRONT PASSENGER SEAT

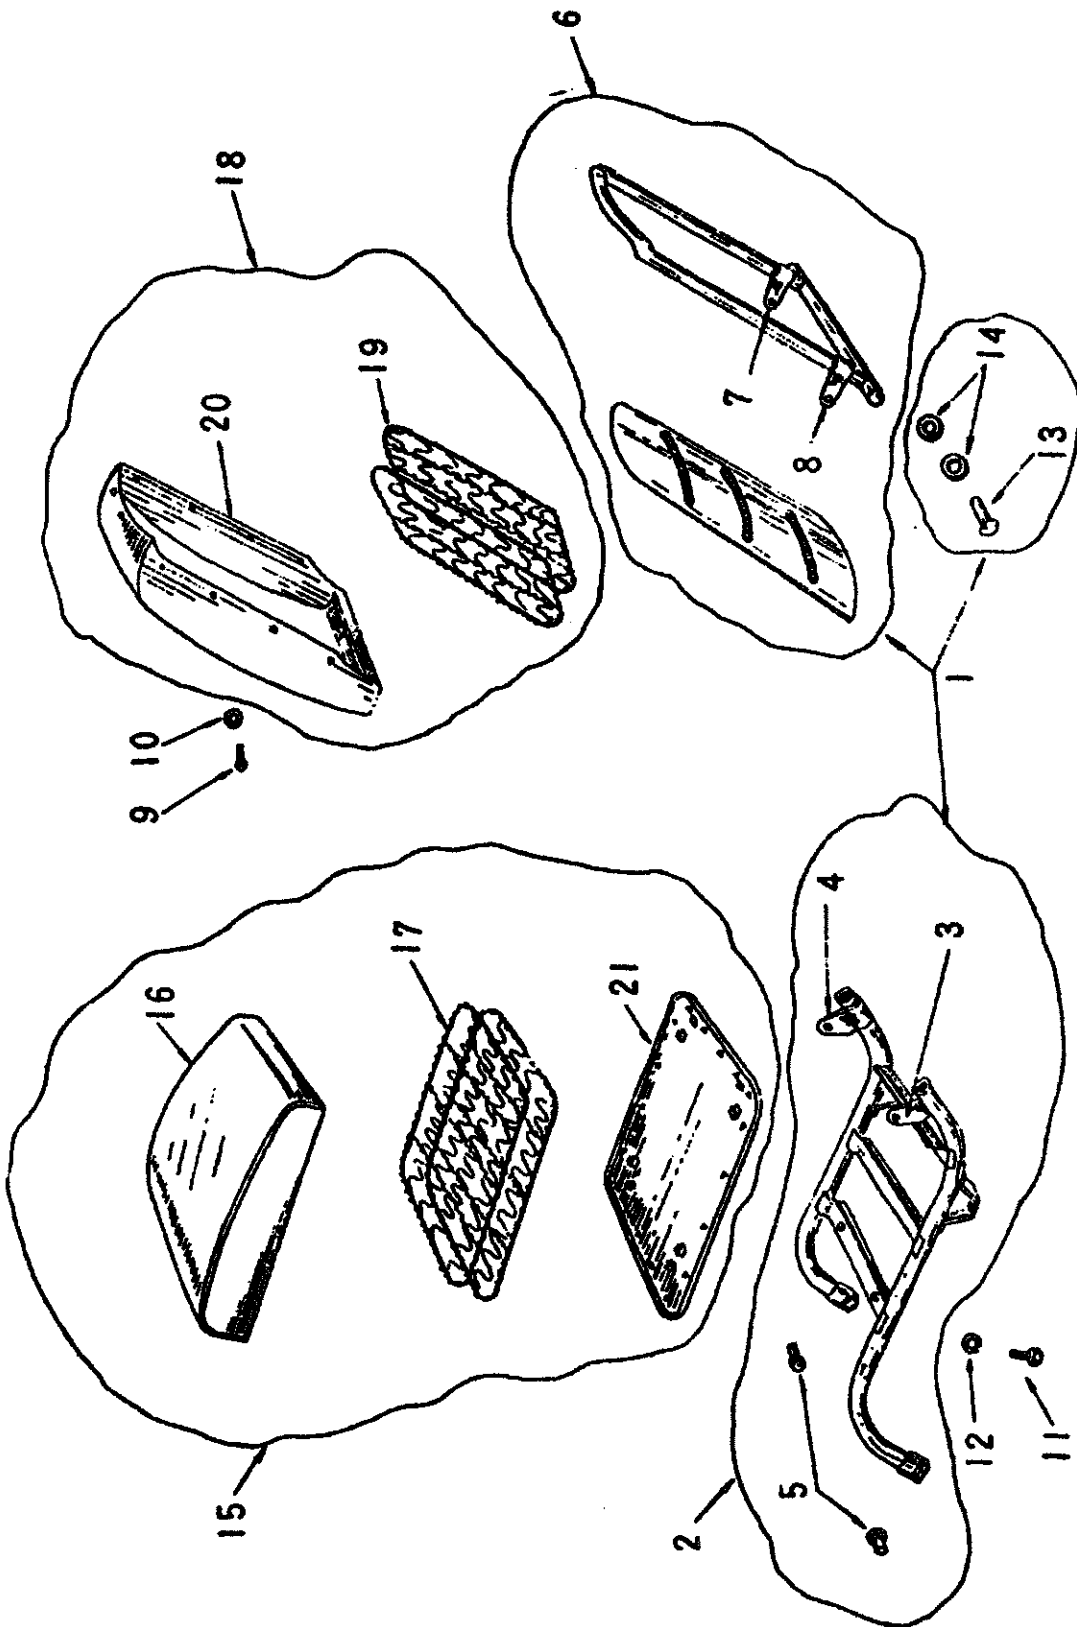



Key	Parts No.	Nomenclature	No. Req'd	
<u>FRONT PASSENGER SEAT</u>				
	JM00749	Seat, front passenger ass'y	1	
1	JM00694	Frame, front passenger seat and back	1	
2	JM00925	Frame, front passenger seat	1	
3	JM00928	Bracket, seat frame L.H.	1	
4	JM00929	Bracket, seat frame R.H.	1	
5	J-677836	Pin, front passenger seat	2	
6	JM00930	Frame, front passenger seat back	1	
7	JM00933	Bracket, seat back frame R.H.	1	
8	JM00934	Bracket, seat back frame L.H.	1	
9	J-52990	Screw, oval hd.	12	
10	J-53732	Washer, plain	12	
11	J-GM-120741	Bolt, hex. hd.	2	
12	J-GM-116120	Lockwasher	2	
13	J-GM-104112	Rivet, rd. hd.	2	
14	J-GM-120383	Washer, plain	4	
15	JM02319	Cushion, front passenger seat	1	
16	JM02319-1	Cover, front passenger seat	1	
17	JM02320	Spring, cushion seat	1	
18	JM01525	Back, front passenger seat ass'y	1	
19	JM01303	Spring, cushion seat back	1	
20	JM01525-1	Cover, front passenger seat back	1	
21	JM01286	Fan, front passenger seat ass'y	1	
	JM00643	Pivot, front passenger seat hinge	2	
	J-GM-120229	Bolt, hex. )	pivot to floor ( ..... 4	
	J-GM-120376	Nut, hex. )		( ..... 4
	J-GM-120214	Lockwasher )		( ..... 4
	JM00743	Clip, front passenger seat frame	1	
	J-GM-159913	Screw )	clip to wheel ( ..... 2	
	J-GM-120361	Nut, hex. )		( ..... 2
	J-GM-120217	Lockwasher )		( ..... 2
	J-GM-120385	Lockwasher )		( ..... 2

REAR PASSENGER SEAT

	JM01714	Cushion, passenger seat rear ass'y	2
	JM01801	Back, rear seat left ass'y	1
	JM01802	Back, rear seat right ass'y	1

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

REAR PASSENGER SEAT (Continued)


J-GM-12207	Bolt, hex. }	Rear seat back to top bow	..... 8
J-GM-120376	Nut		..... 8
J-GM-120214	Lockwasher }		..... 8
JM01716	Frame, rear seat ass'y (Welding)		2
J-52990	Screw	Rear seat cushion cover	28
J-53732	Washer	to frame	28
JM02246	Strap stowage, rear seat cushion ass'y		2
J-GM-121742	Screw		2
J-GM-121743	Nut		2
J-GM-121744	Lockwasher		2
JM02186	Cushion, rear seat		2
JM01721	Frame, rear seat back ass'y (welding)		2
J-52990	Screw	Back cover to frame	..... 36
J-53732	Washer		..... 36
JM00621	Roop, footman		2
J-52990	Screw (Footman roop to frame)		4
JM01727	Plate, mounting		4
J-GM-145193	Screw	Mounting plate to wheel pouse	8
J-GM-120385	Washer		8
JM01724	Pating, rear seat back		2
JM01728	Pin, hinge		4
J-GM-120387	Washer, plain	Rear seat cushion to bracket rear seat	4
J-GM-112726	Pin		4

WINDSHIELD

	JM05402	Windshield ass'y, complete	1
2	J-673551	Screw and lockwasher	4
3	JM04177	Retainer, windshield frame	1
4	J-670953	Loop, spacer, support	1
5	J-681373	Retainer ass'y, L.H.	1
6	J-681369	Bracket, door hinge L.H.	1
7	J-681371	Retainer, L.H.	1
8	J-681374	Retainer ass'y, R.H.	1
9	J-681370	Bracket, door hinge R.H.	1

3 17-1-代(甲) MB0064338 3- 甲 加工して可  
339 3-40 "


WINDSHIELD

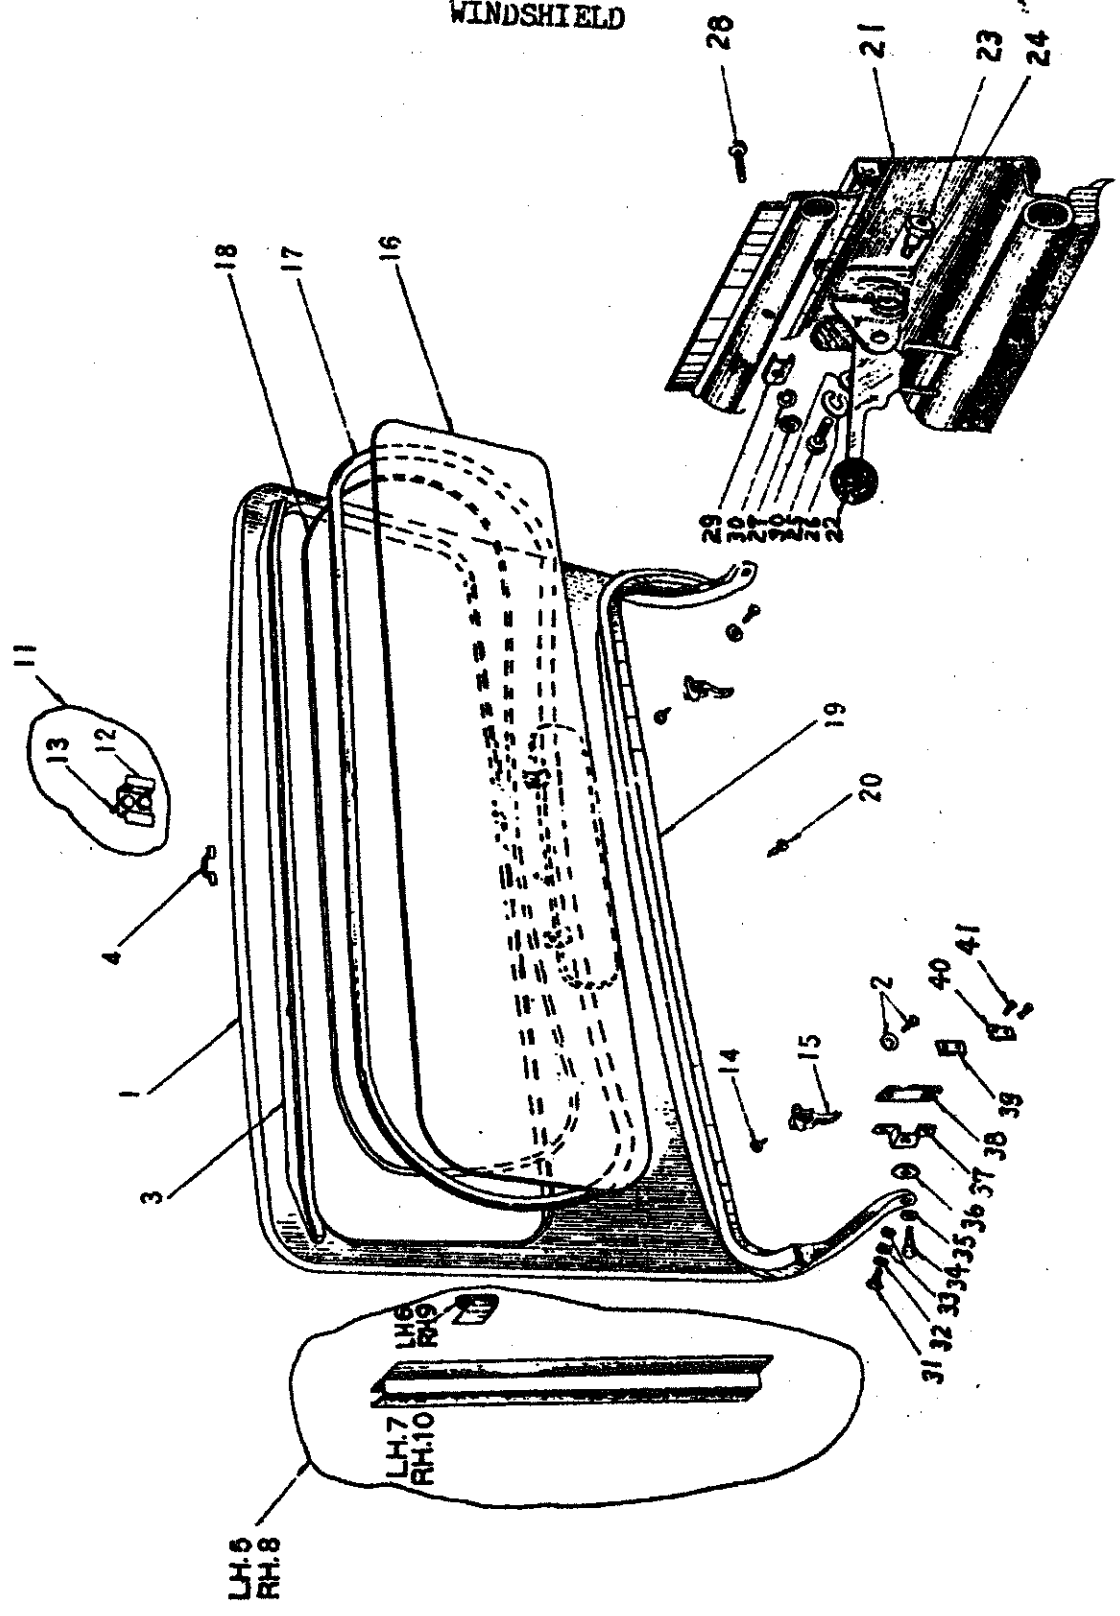

Key	Parts No.	Description	No. Req'd
<u>WINDSHIELD (Continued)</u>			
10	J-681372	Retainer, R.H.	1
11	JM03763	Bracket ass'y, mirror	1
12	JM03764	Bracket, mirror	1
13	J-GM-120706	Bolt, hex. hd.	2
14	J-GM-145255	Screw, tapping	2
15	J-663677	Clamp ass'y, windshield	2
16	J-670911	Glass, windshield	2
17	J-670923	Weatherstrip, windshield glass	1
18	J-670924	Strip, filler	1
19	JM05888	Weatherstrip, windshield to cowl	1
20	J-GM-145193	Screw	17
21	JM02122	Lid ass'y, windshield	1
22	JM02126	Handle ass'y, windshield	1
23	J-671198	Pin, windshield	1
24	J-671205	Spring, windshield	1
25	J-GM-160035	Screw	1
26	J-GM-120217	Lockwasher	3
27	J-GM-120385	Washer, plain	1
28	J-GM-160075	Screw	2
29	JM02128	Washer	2
30	J-GM-120614	Nut, hex.	2
31	J-GM-122017	Bolt, hex. hd.	4
32	J-GM-120393	Washer, plain	4
33	J-805002	Nut and lockwasher	4
34	JM04517	Bolt, pivot windshield	2
35	J-A-2220	Lockwasher	2
36	J-668922	Washer, plain	2
37	JM04530	Bracket ass'y, pivot windshield L.H.	1
	JM04531	Bracket ass'y, pivot windshield R.H.	1
38	J-671015	Plate, tapping windshield	2
39	J-A-2939	Plate, tapping windshield clamp	2
40	J-A-3763	Catch, clamp windshield	2
41	J-GM-120697	Screw, rd. hd.	4
	JM02479	Arm, inside mirror	1
	J-GM-120375	Nut,	} Arm to bracket { ..... 2
	J-GM-120380	Lockwasher,	

Key	Parts No.	Nomenclature	No. Req'd
<u>TELL GATE</u>			
	JM02097	Plate pivot, spare wheel support	1
	JM02098	Receive plate, spare wheel support	2
	JM02096	Gate tell, ass'y	1
	J-651589	Chain, tell gate, left ass'y	1
	J-651590	Chain, tell gate, right ass'y	1
	J-651594	Cover chain, ass'y	2
	J-GM-113818	Washer, plain	4
	J- <del>66366</del>	Hinge, tell gate, ass'y	2
	J-673501	Screw and split lockwasher	4
	J-GM-120377	Nut	4
	J-651593	Link, tell gate chain	2
	J-663111	Lock, tell gate, body half left	1
	J-663112	Lock, tell gate, body half right	1
	J-663194	Lock, tell gate, left	1
	J-663195	Lock, tell gate, right	1
	J-663428	Pin, tell gate, hinge	2
	JM01288	Plug damper, tell gate	2

SPARE TIRE CARRIER

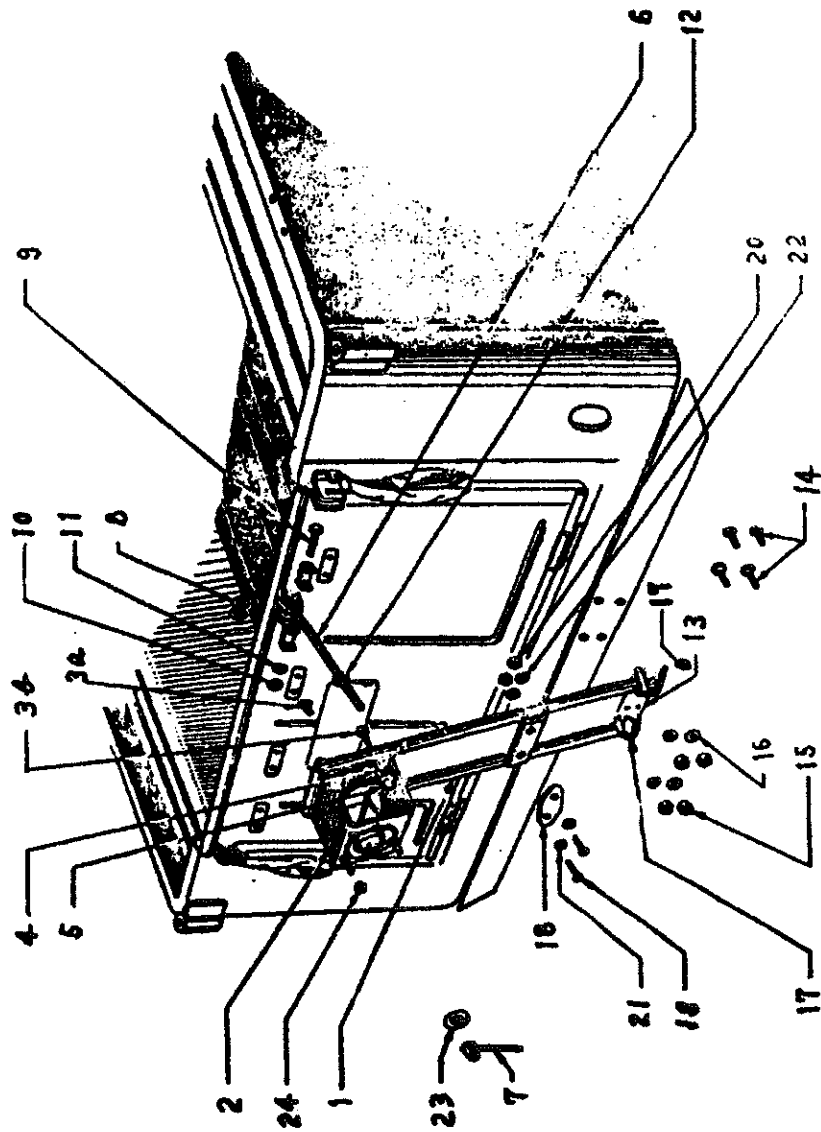


Key	Parts No.	Nomenclature	No. Req'd
<u>SPARE TIRE CARRIER</u>			
1	JM02099	Bracket, spare wheel support welding ass'y	1
2	JM02300	Bracket, spare ass'y	1
3b	J-GM-123520	Bolt	2
3a	J-GM-120668	Bolt	2
4	J-GM-120369	Nut	4
5	J-GM-120381	Lockwasher	4
6	JM02101	Eye bolt	1
7	JM02102	Handle	1
8	JM02307	Spacer	2
9	JM02308	Bolt	1
10	J-GM-271506	Nut	1
11	J-GM-120383	Lockwasher	1
12	JM03150	Nut	1
13	JM02103	Bracket	1
14	J-GM-120758	Bolt	4
15	J-GM-120369	Nut	4
16	J-GM-120381	Lockwasher	4
17	J-GM-120393	Washer	2
18	JM01727	Plate	1
19	J-GM-132848	Screw	2
20	J-GM-120361	Nut	2
21	J-GM-120385	Washer	2
22	J-GM-120217	Lockwasher	2
23	JM02306	Plate	1
24	J-635516	Nut	3
25	J-671157	Damper	1
	J-GM-156331	Screw	2
	J-805003	Nut	2
	J-GM-120386	Washer	2
	JM01548	Stud, spare wheel support	3
	JM01575	Pin, spare wheel bracket	1

Damper to body side { ..... 2  
 { ..... 2  
 { ..... 2

Key	Parts No.	Nomenclature	No. Req'd	
<u>FOLDING TOP</u>				
	JM01659	Folding top, ass'y	1	
2	JM01660	Deck ass'y, top complete	1	
3	JM01678	Top, rail	1	
4	JM00519	Bow, front top, crosssidemember, ass'y	1	
5	JM01673	Bow, front top, sidemember left ass'y	1	
6	JM01674	Bow, front top sidemember right ass'y	1	
7	JM01655	Bow, rear top, crosssidemember, ass'y	1	
8	JM01734	Bow, rear top, sidemember left	1	
9	JM01735	Bow, rear top, sidemember right	1	
10	JM00535	Curtain, side quarter left ass'y	1	
	JM00536	Curtain, side quarter right ass'y	1	
11	JM05766	Door ass'y, left	1	
	JM05767	Door ass'y, right	1	
12	JM00537	Curtain, rear quarter ass'y	1	
13	JM01695	Flap, partition, ass'y	1	
14	JM00621	Loop, footman (wheel house top and side - 4, wheel gate - 4, body side - 8)	16	
	J-GM-155937	Screw	} Footman loop to body { ... 24	
	J-GM-116000	Nut		{ ... 24
	J-GM-115707	Lockwasher		{ ... 24
	J-GM-155937	Screw	} Footman loop to tell gate { ... 8	
	J-GM-441256	Nut		{ ... 8
15	JM01683	Rod, rear side curtain	2	
16	JM01679	Rail, side left ass'y	1	
17	JM01680	Rail, side right ass'y	1	
	J-GM-120369	Nut	} Side rail ass'y to windshield { ..... 4	
	J-GM-120382	Lockwasher		{ ..... 2
	J-GM-427752	Bolt	} Side rail to top bow front side { ..... 2	
	J-GM-120375	Nut		{ ..... 2
	J-GM-120380	Lockwasher		{ ..... 2
18	JM00526	Rod, front side curtain left	1	
19	JM00527	Rod, front side curtain right	1	
	J-GM-427752	Bolt	} Rod front side curtain to side panel { ... 4	
	J-GM-120375	Nut		{ ... 4
	J-GM-120380	Lockwasher		{ ... 4
20	J-674105	Socket, lower door hinge ass'y, left	1	
	J-674106	Socket, lower door hinge ass'y, right	1	



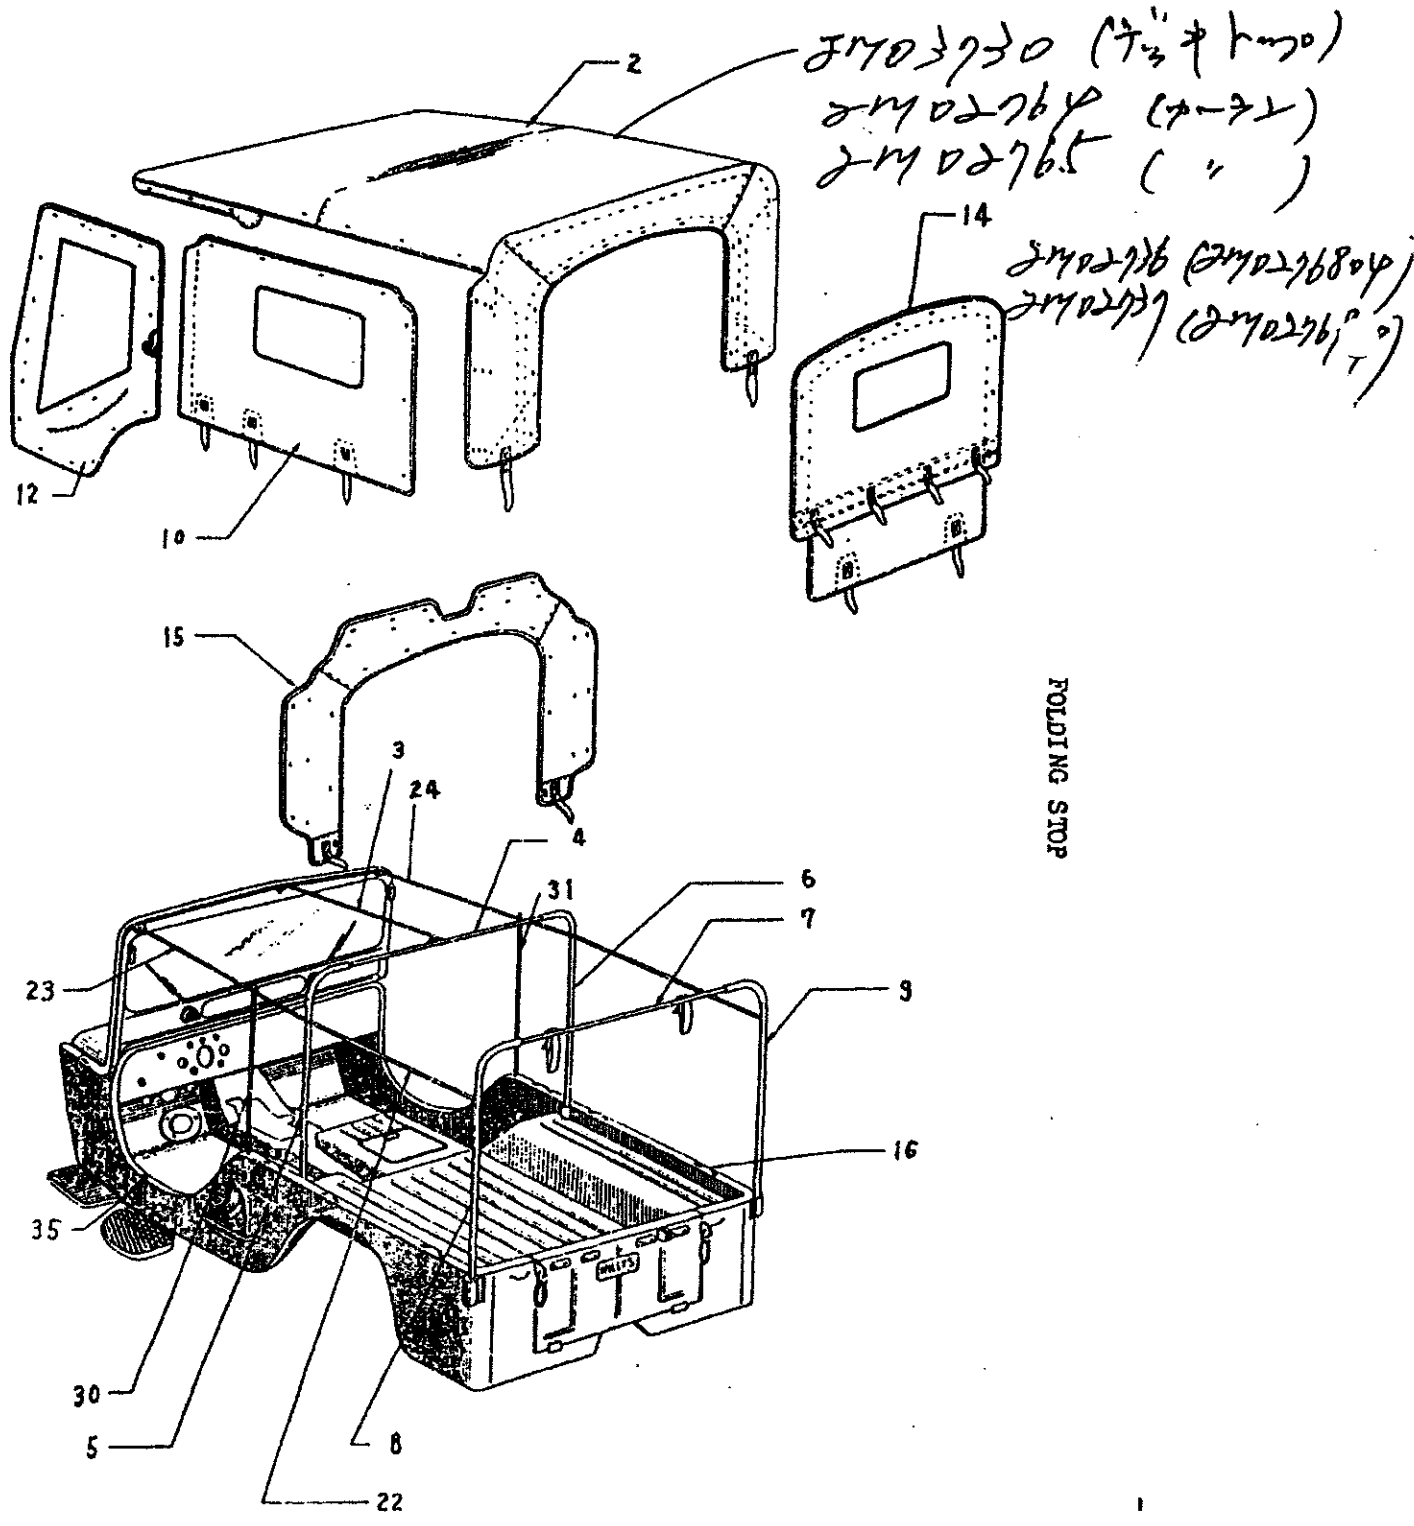

Key	Parts No.	Nomenclature	No. Req'd	
<u>FOLDING TOP (Continued)</u>				
	J-GM-145193	Screw, (door lower hinge)	8	
	J-675205	Strap and buckle 44	2	
	JM01656	Strap and buckle 24	2	
	JM00590	Fastener, male	96	
	JM00591	Washer, fastener male	96	
	JM00592	Fastener, female	67	
	JM00593	Washer, fastener female	67	
	J-674925	Door folding, left ass'y	1	
	J-674926	Door folding, right ass'y	1	
	J-674112	Handle door	2	
	J-674113	Handle and pin, door ass'y	2	
	JM00506	Vinyl seat, door window	2	
	JM00610	Vinyl seat, curtain window side and rear	3	
	J-674114	Plate, door handle	2	
	JM01775	Curtain, door ass'y, left	1	
	JM01776	Curtain, door ass'y, right	1	
	JM00507	Zipper, door handle opening	1	
	JM02487	Kit, folding top fule	1	
		Consists of:		
	JM01660	1 Deck ass'y, top complete		
	JM00535	1 Curtain, side quarter, ass'y left		
	JM00536	1 Curtain, side quarter, ass'y right		
	JM00537	1 Curtain, rear quarter ass'y		
	JM01695	1 Partition flap		
	JM01775	1 Curtain door left ass'y		
	JM01776	1 Curtain door right ass'y		
	J-675205	2 Straptowage, ass'y		
	JM01656	2 Straptowage, ass'y		
	JM00008	2 Pin, door handle		
	3AR8	6 Almirivet		
	JM03160	1 Instruction seat, folding top		
	JM01746	Handrail, rear left, ass'y	1	
	JM01747	Handrail, rear right, ass'y	1	
	J-GM-123435	Bolt	} Handrail rear left and right to body {	
	J-GM-120367	Nut		..... 2
	J-GM-120380	Lockwasher		..... 2
	J-GM-120392	Washer		..... 2

Key	Parts No.	Nomenclature	No. Req'd
-----	-----------	--------------	-----------

FOLDING TOP (Continued)

J-GM-133056	Screw	Handrail rear left and right to top bow	{..... 4 ..... 4 ..... 4
J-GM-120375	Nut		
JMO2128	Washer		

REAR VIEW MIRROR


JMO4008	Mirror, rear view ass'y (outside)	1
JMO2478	Mirror, rear view ass'y (inside)	1
JMO4039	Spacer	{.... 1 .... 1 .... 1
JMO4040	Washer	
J-GM-120369	Nut	
J-GM-120382	Lockwasher	{..... 1
JMO4008/1	Mirror, back	1
JMO4008/2	Stay	1
J-GM-131510	Nut	{..... 1 ..... 1
J-GM-120380	Lockwasher	

WINDSHIELD WIPER

1	J-647412	Grommet	1
2	JMO0911	Hose (c)	1
3	J-663369	Nut, windshield wiper	2
4	J-667074	Connection, tee	1
5	JMO1253	Blade, windshield wiper	2
6	JMO1168	Tubing, windshield wiper	1
7	J-671137	Arm, windshield wiper L.H.	1
8	J-671138	Arm, windshield wiper R.H.	1
9	J-671634	Clip, hose, windshield wiper	1
10	J-680400-1	Screw and lockwasher	3
11	J-GM-120361	Nut, hex.	3
12	JMO4198	Motor, windshield wiper	2
13	JMO3016	Hose, windshield wiper	1
14	JMO0911	Hose (b)	1
15	JMO0911	Hose (e)	1
16	J-78316	Clip, wiper hose	4
17	J-GM-145193	Screw	1

Key	Parts No.	Nomenclature	No. Req'd
<u>WINDSHIELD WIPER (Continued)</u>			
18	J-682123	Tubing, windshield wiper	1
19	J-680787	Spacer, windshield wiper	4
20	J-681277-1	Screw and lockwasher	4
21	JM03017	Hose, windshield wiper	1
22	JM01254	Clip, wiper hose	1
23	J-GM-145193	Screw	8
24	JM03018	Hose, windshield wiper	1
25	JM03002	Clip, wiper hose	4

WINKER

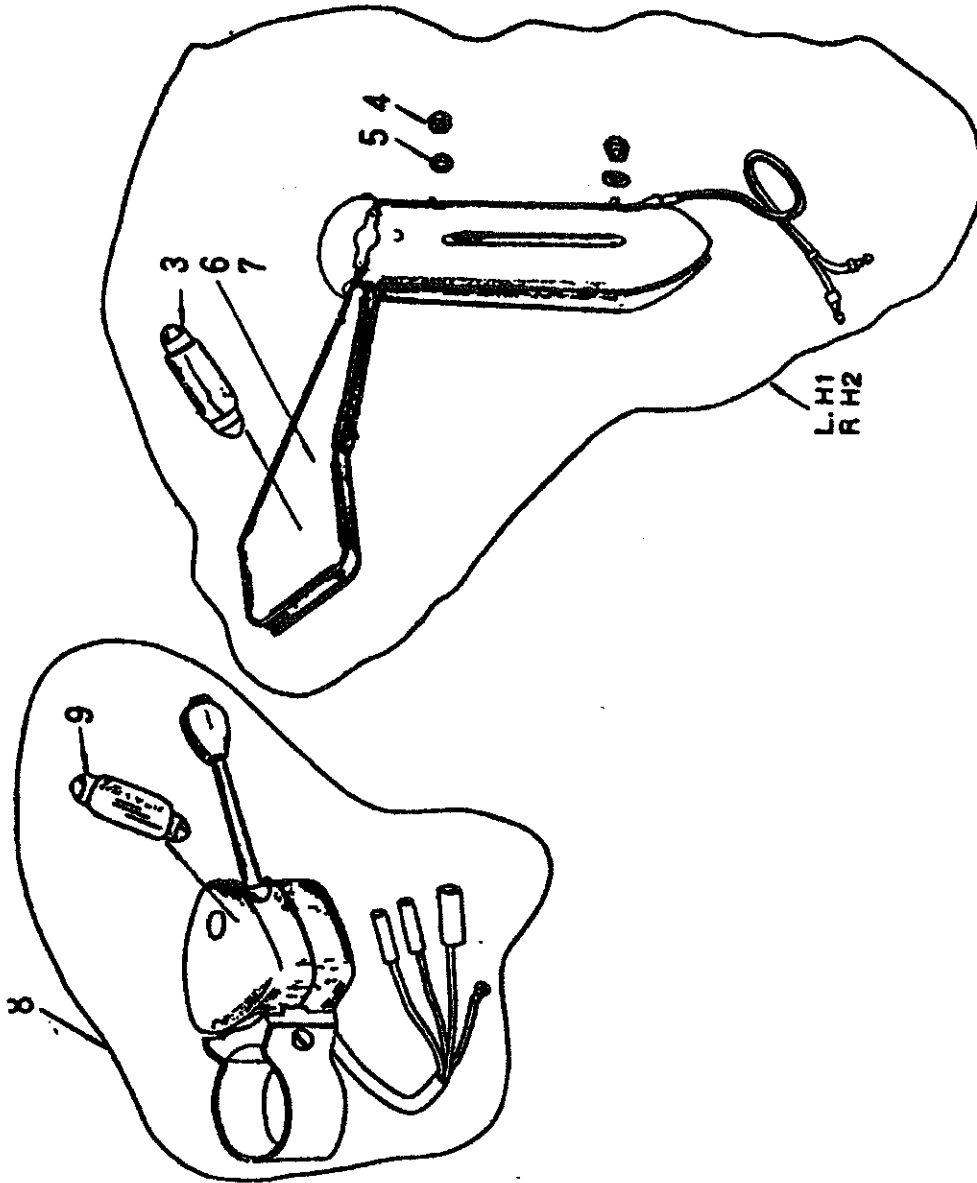

Key	Parts No.	Nomenclature	No. Req'd
<u>WINKER</u>			
1	JMO4515	Winker ass'y, L. H.	1
2	JMO4516	Winker ass'y, R. H.	1
3	JMO4525	Lamp, winker	2
4	JMO4364	Nut, hex.	4
5	J-GM-121753	Washer, lock, external	4
6	JMO4351	Window, winker	1
7	JMO4352	Window, winker	1
8	JMO4375	Handlever and harness	1
9	JMO4376	Lamp, pilot, winker	1
	JMO3925	Clip, harness	2
	JMO0620	Bracket, winker	2
	J-GM-192109	Clip	2
	JMO0396	Grommet, winker wire	2
	J-78316	Clip, clamp, winker wire	2
	J-GM-145193	Screw	2
	JMO1289	Fuse and holder ass'y	1

NUMERICAL INDEX

JM

Parts No.	Page	Parts No.	Page
JM00008	150	JM00526	148
* JM00024	139	* JM00527	148
JM00024-1	139	JM00535	148, 150
JM00024-1	139	JM00536	148, 150
JM00024-3	139	JM00537	148, 150
JM00024-4	139	JM00579	135
JM00024-5	139	JM00590	150
JM00024-6	139	JM00591	150
JM00024-7	139	JM00592	150
JM00024-8	139	JM00593	150
JM00024-9	139	JM00610	150
JM00026	139	JM00620	
JM00054	31, 43	* JM00621	49, 142, 148
JM00057	31	* JM00643	141
JM00058	31, 43	JM00676	133
* JM00059	31	JM00694	141
* JM00063	31	JM00719	59
JM00091	43, 61	JM00725	59
JM00105	31	JM00743	141
JM00106	43	JM00749	141
JM00229	123	JM00762-6	137
JM00265	123	JM00764	137
JM00276	135	JM00765	137
JM00284	135	JM00767	137
JM00303	54	JM00771	137
JM00396		JM00788	54
JM00416	130	JM00790	54
JM00417	135	JM00791	54
JM00418	135	JM00816	53, 61
JM00419	135	JM00816-1	53, 61
JM00420	135	JM00817	53, 61
JM00423	135	JM00819	119
JM00424	135	JM00834	53
JM00425	135	JM00837	53
JM00426	13	JM00841	53
JM00441	123	JM00842	54
JM00506	150	JM00854	59
JM00507	150	JM00864	63
* JM00519	148	JM00365	63

Parts No.	Page	Parts No.	Page
JM00883	53	JM01351-42	56
JM00896	59	JM01381	47
JM00899	59	JM01470	125, 127, 128
JM00910	63	JM01471	125, 127, 128
JM00911	151	JM01473	125, 128
JM00914	54	JM01481	43
JM00925	141	JM01509	54, 61
JM00928	141	JM01524	137
JM00929	141	JM01524-1	137
JM00930	141	JM01525	141
JM00933	141	JM01525-1	141
JM00934	141	JM01548	147
JM00938	54	JM01558	86
JM00954	54, 61	JM01560	86
JM01002	45	JM01570	119
JM01042	37, 54	JM01571-8	31
JM01043	54	JM01571-12	31
JM01066	37	JM01571-15	31
JM01109	47	JM01571-16	31
JM01110	47	JM01571-19	31
JM01146	47	JM01572	31
JM01155	123, 127	JM01575	147
JM01156	47	JM01586	63
JM01168	151	JM01594	61, 63
JM01171	47	JM01595	59, 63
JM01189	54	JM01597	56, 61
JM01205	47	JM01598	56, 59
JM01253	151	JM01602	61, 63
JM01254		JM01603	53, 61
JM01255	107, 111	JM01606	59
JM01258	53, 61	JM01608	56
JM01268	53	JM01609	59
JM0128	45	JM01612	59
JM01286	137, 141	JM01614	54
JM01288	145	JM01615	59
JM01289	61 ( )	JM01616	59
JM01303	137, 141	JM01618	59, 61
JM01324	59	JM01622	59, 61
JM01351	56	JM01624	59
JM01351-41	56	JM01627	63



Parts No.	Page	Parts No.	Page
JM01628	63	JM01853	88, 90, 91
JM01629	63	JM01854	94
* JM01633	135	JM01906	93
JM01636	63	* JM01907	93
JM01638	53, 61	* JM01908	93
* JM01655	148	JM01953	104
* JM01656	150	JM02025	54
JM01659	148	JM02026	54
JM01660	148, 150	JM02027	54
* JM01673	148	JM02028	54
* JM01674	148	JM02029	54
JM01678	148	JM02041	98
JM01679	148	JM02069	98
JM01680	148	JM02096	145
* JM01683	148	JM02097	145
JM01695	148, 150	JM02098	145
JM01707	135	* JM02099	147
JM01708	135	JM02101	147
JM01714	141	JM02102	147
JM01716	142	JM02103	147
JM01721	142	* JM02119	101, 111
JM01724	142	JM02122	144
* JM01727	142, 147	JM02126	144
JM01728	142	* JM02128	144, 151
* JM01734	148	JM02161	135
* JM01735	148	JM02186	142
JM01745	53, 61	* JM02180	123
* JM01746	150	* JM02180	123
* JM01747	150	* JM02180-2	123
JM01775	150	JM02180-3	123
JM01776	150	JM02180-4	123
JM01777	59, 61	JM02180-5	123
JM01786	63	JM02180-6	123
JM01787	63	JM02180-7	123
JM01794	63	JM02180-8	123
JM01795	63	JM02180-9	123
JM01801	141	JM02180-10	123
JM01802	141	JM02180-11	123
JM01815	93	JM02180-12	123
JM01816	93	* JM02180-13	123, 125
JM01817	116	* JM02181	127

Parts No.	Page	Parts No.	Page
JM02181-1	127	JM02339	56
JM02181-2	127	JM02340	56
JM02181-3	127	JM02341	63
JM02181-4	127	JM02342	63
JM02181-5	127	JM02343	63
JM02181-6	127	* JM02356	94, 109
JM02181-7	127	* JM02357	94, 109
JM02181-8	127	* JM02358	94, 109
JM02181-9	127	* JM02359	91, 93
JM02181-10	127	* JM02360	91, 94
JM02181-11	127	* JM02361	91, 94
JM02181-12	127	* JM02362	91, 94
JM02181-13	127	* JM02363	91, 94
JM02181-14	127	* JM02364	91, 94
JM02181-15	127	* JM02365	91, 94
JM02181-16	127	* JM02367	91, 94
JM02193	91, 93	* JM02368	91, 94
JM02195	63	* JM02369	91, 94
JM02197	56	* JM02370	90
JM02236	53, 61	* JM02371	90
* JM02246	142	JM02372	90
JM02289	54	JM02430	130
* JM02300	147	JM02431	130
* JM02306	147	JM02440	125
JM02307	147	JM02441	127
JM02308	147	JM02453	118, 119
JM02313	137	JM02455	45
JM02314	137	JM02458	63, 118
JM02319	137, 141	JM02473	94, 109
JM02319-1	137, 141	JM02474	91
JM02320	137, 141	JM02475-1	91, 94
JM02330	63	JM02478	151
JM02331	63	JM02479	144
JM02332	63	JM02481	63
JM02333	56	JM02483	123
JM02334	56	JM02487	150
JM02335	56	JM02497	31
JM02336	53, 56	JM02503	61, 63
JM02337	56	JM02504	53
JM02338	56	JM02548	118

Parts No.	Page	Parts No.	Page
JMO2619	119	JMO3752	101
JMO2635	91	JMO3763	144
JMO2636	93	JMO3764	144
JMO2638	93	JMO3775	130
JMO2639	91, 93	JMO3776	130
JMO2640	91, 94	JMO3781	102
JMO2641	88	JMO3782	102
JMO2642	96	JMO3821	31
JMO2643	96	JMO3925	154
JMO2644	94, 109	JMO3932	130
JMO2873	93, 96	JMO3932-3	130
JMO2916	125	JMO4008	151
JMO2917	125	JMO4008-1	151
JMO3002	151	JMO4008-2	151
JMO3016	151	JMO4009	43, 54
JMO3017	151	JMO4039	151
JMO3018	86, 94, 107	JMO4040	151
	114, 116, 127	JMO4062	99
JMO3093	29, 107	JMO4067	99
JMO3148	104	JMO4068	99
JMO3150	147	JMO4069	99
JMO3154	123	JMO4070	90
JMO3160	150	JMO4082	119
JMO3191	119	JMO4084	86
JMO3254	56, 61	JMO4085	86
JMO3257	56, 61	JMO4090	88, 114
JMO3258	56	JMO4091	114
JMO3259	56	JMO4092	114
JMO3260	56	JMO4094	114
JMO3263	93, 96	JMO4095	114
JMO2742	101	JMO4103	99
JMO3743	101	JMO4105	96
JMO3744	99	JMO4106	96
JMO3745	99	JMO4126	98
JMO3746	101	JMO4177	142
JMO3747	101	JMO4198	151
JMO3748	101	JMO4282	96
JMO3749	101	JMO4343	86
JMO3750	101	JMO4351	154
JMO3751	101	JMO4352	154

Parts No.	Page	Parts No.	Page
JM04359	59	JM60419	37
JM04364	154	JM60427	23
JM04375	61 (154)	JM60428	23
JM04376	154	JM60440	77, 80
JM04462	114	JM60440-1	77, 80
JM04474	54	JM60442	77, 80
JM04475	54	JM60443	73
JM04515	61 (154)	JM60445	35
JM04516	61 (154)	JM60451	9
JM04517	144	JM60485	83
JM04525	154	JM60554	35
JM04530	144	JM60554	37
JM04531	144	JM60555	37
JM04562	130	JM60556	37
JM05093	94, 96	JM60787	17
JM05240	59	JM60878	75
JM05402	142	JM61902	67
JM05750	93	JM61903	73
JM05766	148	JM62050	69
JM05765	148	JM62051	69
JM05888	144	JM62052	69
JM60087	61	JM62060	73
JM60091	51	JM62061	73
JM60163	9		
JM60100	15		
JM60218	79		
JM60219	83		
JM60222	15		
JM60223	67		
JM60224	17		
JM60278-1	34		
JM60283	35		
JM60330	27		
JM60339	79, 81		
JM60340	5, 11		
JM60397-1	39		
JM60409	23		
JM60415	35		
JM60417	35		
JM60418	35		

J-GM-

Parts No.	Page	Parts No.	Page
J-GM-102647	90,116	J-GM-120214	19,21,23,29
J-GM-103025	90,116		31,39,47,51
J-GM-103026	98,119		59,70,86,98
J-GM-103195	9		96,107,125,128
J-GM-103196	25		137,141,142
J-GM-103320	45,81	J-GM-120217	130,135
J-GM-103321	88,90,98,109		141,144,147
J-GM-103325	118	J-GM-120219	9
J-GM-103373	99	J-GM-120228	21,31
J-GM-103407	125,127		81,83,137
J-GM-103647	6	J-GM-120229	9,51,70
J-GM-103865	118		128,141
J-GM-103866	8	J-GM-120361	49,130,135
J-GM-103868	88		141,147,151
J-GM-103869	93,96	J-GM-120367	37,75,150
J-GM-103877	8,9,33	J-GM-120368	8,9,17,23,27
J-GM-103879	51		37,45,70,96
J-GM-103880	9,79,83		98,114,113
J-GM-103883	8	J-GM-120369	6,29,33,37,49
J-GM-104112	141		59,70,72,101
J-GM-106750	67		147,148,151
J-GM-107985	116	J-GM-120370	107,111,114
J-GM-108579	90,93,96,118	J-GM-120371	8,67,83
J-GM-108629	90,116	J-GM-120375	56,69,128,130
J-GM-112432	54		144,148,151
J-GM-112726	37,142	J-GM-120376	31,130,137
J-GM-113454	49,130		142,141
J-GM-113818	145	J-GM-120377	139,145
J-GM-114605	90	J-GM-120378	123
J-GM-115137	63	J-GM-120380	8,19,21,51,56
J-GM-115707	49,148		73,128,130,133
J-GM-116000	148		144,148,151
J-GM-116120	141		150
J-GM-117114	63	J-GM-120381	139,147
J-GM-119252	99	J-GM-120382	8,15,49,59,67
J-GM-120123	21,27		70,72,88,98
J-GM-120211	135		109,111,148
J-GM-120213	8		151